



# SIP Firmware Release 1.1 for IP Phone 1140E Administration

Document status: Standard  
Document version: 02.05  
Document date: 27 May 2008

Copyright © 2008, Nortel Networks  
All Rights Reserved.

#### LEGAL NOTICE

While the information in this document is believed to be accurate and reliable, except as otherwise expressly agreed to in writing NORTEL PROVIDES THIS DOCUMENT AS IS WITHOUT WARRANTY OR CONDITION OF ANY KIND, EITHER EXPRESS OR IMPLIED. The information and/or products described in this document are subject to change without notice.

Sourced in Canada

Nortel, the Nortel Logo, the Globemark, SL-1, Meridian 1, and Succession are trademarks of Nortel Networks.

All other trademarks are the property of their respective owners.

---

# Contents

---

<b>New in this release</b>	<b>7</b>
Other changes	7
Revision history	7
<b>How to Get Help</b>	<b>9</b>
Getting Help from the Nortel Web site	9
Getting Help over the telephone from a Nortel Solutions Center	9
Getting Help from a specialist using an Express Routing Code	10
Getting Help through a Nortel distributor or reseller	10
<b>Introduction to this guide</b>	<b>11</b>
Subject	11
Intended audience	11
Acronyms	11
Related publications	13
<b>Overview</b>	<b>15</b>
Introduction	15
SIP overview	15
IP Phone 1140E with SIP Firmware	15
Related documentation	16
Installation overview	17
Supported SIP proxy servers	20
<b>Before installation</b>	<b>21</b>
Introduction	21
Preinstallation	21
<b>Configure the provisioning server</b>	<b>25</b>
How provisioning works	25
Download the SIP Firmware to the provisioning server	26
Create the SIP provisioning file on the provisioning server	26
Create the device configuration file on the provisioning server	31
Device configuration commands	34
Create the Dialing Plan file on the provisioning server	50
Dialing function description	52
Downloadable WAV files	56

<b>Configure the DHCP server</b>	<b>57</b>
Partial DHCP mode	57
Full DHCP mode	58
Configure the DHCP server to support Full DHCP mode	59
DHCP VLAN Auto Discovery	61
<b>Physically install the IP Phone 1140E</b>	<b>63</b>
<b>Upgrade and convert the IP Phone 1140E firmware</b>	<b>67</b>
Introduction	67
Upgrade the SIP Firmware on the IP Phone 1140E	67
Download the SIP Firmware to the provisioning server	67
Modify the SIP provisioning file	68
Upgrade to the minimum UNISTim Firmware	69
Identify the current version of UNISTim Firmware	69
Upgrade UNISTim Firmware to the minimum required UNISTim Firmware	72
Convert UNISTim Firmware to SIP Firmware on the IP Phone 1140E	75
<b>Voice Quality Monitoring</b>	<b>79</b>
Feature overview	79
VQMon set-up	79
Server set-up	80
How VQMon works	80
<b>Device Settings on the IP Phone 1140E with SIP Firmware</b>	<b>81</b>
Introduction	81
802.1x (EAP) Port-based network access control	82
Configure the device settings	89
<b>Multiple Appearance Directory Number (Single Call Arrangement)</b>	<b>97</b>
Vertical services	97
Privacy	98
Feature dependencies and restrictions	98
<b>Emergency 911 - Operator control of disconnect</b>	<b>99</b>
Overview	99
Location information	99
Dialing plan configuration	100
Characteristics of E911 calls	100
<b>IP Phone 1140E restrictions</b>	<b>101</b>
Service package restrictions	101
Distinctive Ringing feature	101
<b>NAT firewall traversal</b>	<b>103</b>
<b>Three-port switch and VLAN functionality</b>	<b>105</b>
System overview	105

---

<b>SIP messages supported by the IP Phone 1140E</b>	<b>109</b>
SIP methods	109
SIP responses	110
1xx Response--Information Responses	110
2xx Response--Successful responses	111
3xx Response--Redirection responses	111
4xx Response--Request failure responses	112
5xx Response--Server failure responses	114
6xx Response--Global responses	115
Default error handling	115
SIP header fields	115
Session description protocol usage	118
SDP and Call Hold	119
Transport layer protocols	119
SIP security authentication	119
SIP DTMF Digit transport	120
Supported subscriptions	120
Supported instant messaging	120
<b>Maintenance and troubleshooting</b>	<b>123</b>
Convert SIP Firmware to UNISTim Firmware	123
IP Phone 1140E diagnostics	124
<b>Index</b>	<b>127</b>

---



---

## New in this release

---

### Other changes

For a detailed history of past releases of this document, see "[Revision history](#)" (page 7).

### Revision history

#### **May 2008**

Standard 02.05. This document is up-issued to reflect changes in technical content.

#### **February 2008**

Standard 02.04. This document is up-issued to include editing changes.

#### **November 2007**

Standard 02.03. This document is up-issued to reflect changes in the technical information in response to change requests. A note was added stating that NAT\_SIGNALLING is required for networks that use STUN or SIP\_PING for NAT traversal. The commands FORCE\_OCT\_END and OCT\_END were changed to FORCE\_OCT\_ENDDIAL and DISABLE\_OCT\_ENDDIAL respectively.

#### **October 2007**

Standard 02.02. This document is up-issued to ensure that the value of 802.1P\_MEDIA parameter in the QoS and ToS commands must be set to -1 to be able to have a voice path.

#### **July 2007**

Standard 02.01. This document is up-issued to support SIP Firmware for IP Phone 1140E Maintenance Release 1.1.

#### **March 2007**

Standard 01.02. This document is up-issued to incorporate an addition to the Maintenance and Troubleshooting section.

#### **January 2007**

Standard 01.01. This is a new document created to support the IP Phone 1140E with SIP Firmware.





---

## How to Get Help

---

This section explains how to get help for Nortel products and services.

### Getting Help from the Nortel Web site

The best way to technical support for Nortel products is from the Nortel Technical support Web site:

[www.nortel.com/support](http://www.nortel.com/support)

This site provides quick access to software, documentation, bulletins, and tools to address issues with Nortel products. More specifically, the site enables you to:

- download software, documentation, and product bulletins
- search the Technical Support Web site and the Nortel Knowledge Base for answers to technical issues
- sign up for automatic notification of new software and documentation for Nortel equipment
- open and manage technical support cases

### Getting Help over the telephone from a Nortel Solutions Center

If you do not find the information you require on the Nortel Technical Support Web site, and have a Nortel support contract, you can also get help over the telephone from a Nortel Solutions Center.

In North America, call 1-800-4Nortel (1-800-466-7835).

Outside North America, go to the following Web site to obtain the telephone number for your region:

[www.nortel.com/callus](http://www.nortel.com/callus)

## **Getting Help from a specialist using an Express Routing Code**

To access some Nortel Technical Solutions Centers, you can use an Express Routing Code (ERC) to quickly route your call to a specialist in your Nortel product or service. To locate the ERC for your product or service, go to [www.nortel.com/erc](http://www.nortel.com/erc)

## **Getting Help through a Nortel distributor or reseller**

If you purchased a service contract for your Nortel product from a distributor or reseller, contact the technical support staff for that distributor or reseller.

# Introduction to this guide

## Subject

*SIP Firmware Release 1.1 for IP Phone 1140E Administration* (NN43113-300) describes how to install, configure, and provision the IP Phone 1140E for use on a SIP network.

## Intended audience

This administration guide is intended for system administrators of the Nortel IP Phone 1140E with a basic understanding of SIP. This guide is not intended for end users of the IP Phone 1140E. Many of the tasks outlined in the guide influence the function of the IP Phone 1140E on the network and require an understanding of telephony and Internet Protocol (IP) networking.

## Acronyms

This guide uses the following acronyms:

**Table 1**  
**Acronyms used**

AAA	Authentication, Authorization, and Accounting
ALG	Application Layer Gateway
DHCP	Dynamic Host Configuration Protocol
DNS	Domain Name System
DRegex	Digit Regular Expression
DSCP	Differentiated Services Code Point
EAP	Extensible Authentication Protocol
ERE	Extended Regular Expressions
FQDN	Fully Qualified Domain Name
FTP	File Transfer Protocol
GARP	Gratuitous Address Resolution Protocol
GUI	Graphical User Interface
HTTP	Hyper Text Transfer Protocol

IETF	Internet Engineering Task Force
ISDN	Integrated Services Digital Network
IM	Instant Message
IP	Internet Protocol
IPCM	Internet Protocol Client Manager
ITU-T	Telecommunications Standardization sector of the International Telecommunications Union
LAN	Local Area Network
MAC	Media Access Control
MADN	Multiple Appearance Directory Number
MAS	Media Application Server
NAT	Network Address Translator
NetConfig	Configuration screens available after an IP Phone resets
NDU	Network Diagnostic Utility
PDT	Problem Determination Tool
PEC	Product Engineering Code
POE	Power Over Ethernet
POSIX	Portable Operating System Interface
PRACK	Provisional Acknowledgement
PSTN	Public Switched Telephone Network
PVQMon	Proactive Voice Quality Monitoring
QoS	Quality of Service
RADIUS	Remote Authentication Dial In User Service
RTCP	Real-time Control Protocol
RTCP XR	RTP Control Protocol Extended Reports
RTP	Real-time Transfer Protocol
SCA	Single Call Arrangement
SDP	Session Description Protocol
SIMPLE	SIP for Instant Messaging and Presence Leveraging Extensions
SIP	Session Initiation Protocol
SMTP	Simple Mail Transfer Protocol
STUN	Simple Traversal of UDP through NAT devices
TFTP	Trivial File Transport Protocol
TPS	Terminal Proxy Server
TTL	Time-to-live

UDP	User Datagram Protocol
UFTP	UNISTim File Transfer Protocol
UNISTim	Unified Network IP Stimulus Protocol
VoIP	Voice over IP
VLAN ID	Virtual Local Area Network Identification
VLAN IP	Virtual Local Area Network Internet Protocol
VQMon	Voice Quality Monitoring

## Related publications

Other publications related to the SIP Firmware Release 1.1 for IP Phone 1140E Administration are:

- *SIP Firmware Release 1.1 for IP Phone 1140E Quick Reference Card* (NN43113-102)
- *SIP Firmware Release 1.1 for IP Phone 1140E User Guide* (NN43113-101)
- Nortel IP Phone 1100 Series product bulletins on [www.nortel.com/support](http://www.nortel.com/support).



---

# Overview

---

## Introduction

This chapter describes the hardware and firmware features of the Nortel IP Phone 1140E and provides a brief overview of Session Initiation Protocol (SIP).

### SIP overview

Session Initiation Protocol (SIP) is a signaling protocol used for establishing multimedia sessions in an Internet Protocol (IP) network.

SIP is a text-based protocol similar to HTTP and SMTP. With the introduction of SIP to IP Phones, telephony integrates easily with other Internet services. SIP allows the convergence of voice and multimedia.

### IP Phone 1140E with SIP Firmware

The IP Phone 1140E connects to an IP network using an Ethernet connection. All voice and signaling information is converted into IP packets and sent across the network.

The IP Phone 1140E can be ordered with UNISTim Firmware installed or with SIP Firmware installed. UNISTim Firmware and SIP Firmware use the same hardware, but the model number of an IP Phone 1140E with UNISTim Firmware is different from the model number of an IP Phone 1140E with SIP Firmware.

If you have an IP Phone 1140E with UNISTim Firmware, you can convert the firmware to SIP Firmware. The most recent version of SIP Firmware can be obtained from Nortel and installed on the IP Phone 1140E.

This guide explains how to:

- configure the provisioning server and the DHCP server. Note: The provisioning server is where the firmware and the configuration files for the IP Phone 1140E reside. This is not the IP Client Manager (IPCM) of the call server.
- convert an IP Phone 1140E with UNISTim Firmware to an IP Phone 1140E with SIP Firmware

- provision the Device Settings parameters on the IP Phone 1140E with SIP Firmware

Note: Converting the firmware on an IP Phone 1140E from UNISTim Firmware to SIP Firmware overwrites the UNISTim Firmware. The IP Phone 1140E cannot operate in both modes simultaneously. A switch from UNISTim to SIP Firmware or SIP to UNISTim Firmware requires a firmware reload.

The following figure shows the main components of the IP Phone 1140E with SIP Firmware.

**Figure 1**  
**IP Phone 1140E with SIP Firmware**



### Related documentation

The *SIP Firmware Release 1.1 for IP Phone 1140E User Guide* (NN43113-101) tells the end user how to use the IP Phone 1140E, including how to:

- use the **Context-sensitive soft keys** and **Navigation key cluster**
- enter text
- use the address book
- access and use the call inbox and call outbox
- configure and use instant messaging
- receive, identify, answer, redirect, decline, or ignore an incoming call
- operate hold, three-way calling, call transfer, and call park
- use other features such as speed dial, call forward, do not disturb, and setting up conference calls



- configure Bluetooth headset operation (IP Phone 1140E only)

**Note:** All features are not available with all call servers.

The IP Phone 1140E Getting Started Card included in the box with the IP Phone 1140E also contains useful information and explains how to:

- connect the AC power adapter
- control the volume when answering a call
- make a call using the handset
- make a call with the headset or using handsfree
- use hold and mute
- set the contrast
- set the language

### Installation overview

To install the IP Phone 1140E with SIP Firmware, three basic steps are required.


#### Procedure 1

##### Installation overview


Step	Action
1	Configure the provisioning server and, optionally, the DHCP server. The function of the provisioning server is to provide configuration options to every IP Phone 1140E throughout the network. The DHCP server can be configured to provide basic network-configuration data or a more comprehensive set of network-configuration data for the IP Phone 1140E with SIP Firmware.
2	Load SIP Firmware on the IP Phone 1140E.
3	Configure the initial network-configuration parameters on the IP Phone 1140E with SIP Firmware.

—End—

**Figure 2**  
**Installation of IP Phone 1140E with SIP Firmware, page 1 of 2**

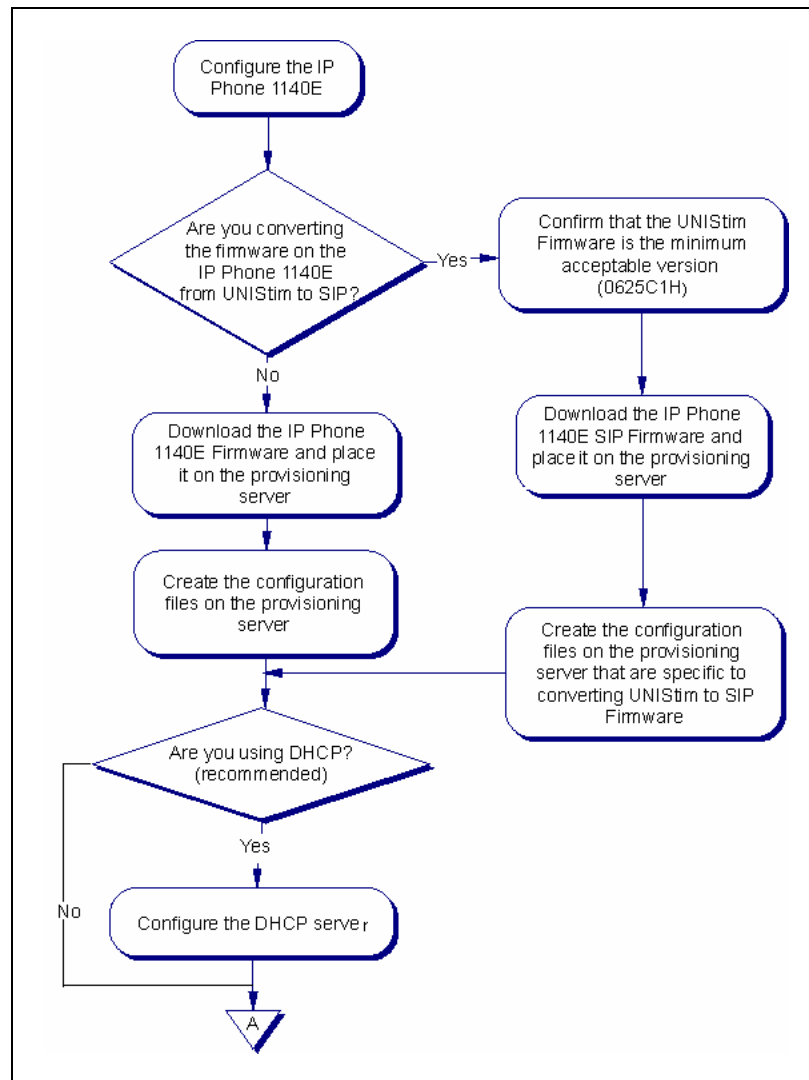

**Figure 3**  
**Installation of IP Phone 1140E with SIP Firmware, page 2 of 2**

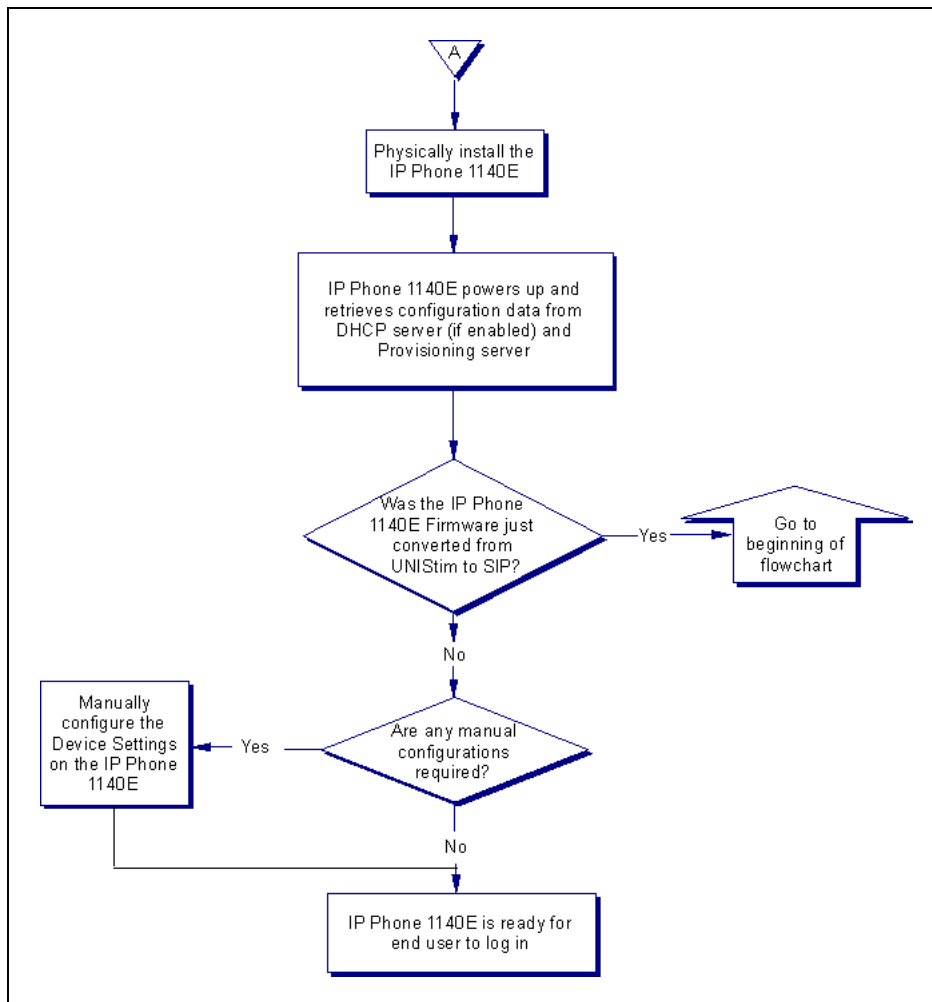

## Supported SIP proxy servers

Call server	Call server release	Minimum SIP Firmware on the IP Phone 1140E
MCS 5100	3.5	1.0
MCS 5100	4.0	1.0
MCS 5100 with CS 1000	3.5 4.5	1.0
MCS 5100 with CS 1000	3.5 5.0	1.1
MCS 5100 with CS 1000	4.0 5.0	1.1
CS 1500	1.0	1.1
CS 2000	SN09U	1.1
CS 2000	SN10	1.1
CS 2100	SE09.1	1.1
CS 2100	SE10	1.1
BroadSoft	14.0	1.1

# Before installation

## Introduction

This chapter features a checklist of tasks you must complete before you install SIP Firmware on the IP Phone 1140E.

## Preinstallation

Complete the following checklist.

### Procedure 2

#### Preinstallation checklist

Step	Action
1	Read and become familiar with the <i>SIP Firmware Release 1.1 for IP Phone 1140E User Guide</i> (NN43113-101) and the <i>SIP Firmware Release 1.1 for IP Phone 1140E Quick Reference Card</i> (NN43113-102).
2	Ensure there is one IP Phone 1140E boxed package for each IP Phone 1140E being installed.
3	Ensure that the IP Phone 1140E box includes:

**Table 2**  
**IP Phone 1140E box contents**

Item	Order number
IP Phone 1140E Graphite with icon keys without PS (SIP) (RoHS)	NTYS05CAE6 N0142353
IP Phone 1140E Graphite with English keys without PS (SIP) (RoHS)	NTYS05DAE6 N0142354
<b>Accessories</b>	
Handset, Charcoal	NTYS09AA70
Handset cord, Charcoal	NTYS10AA70

Footstand kit, Charcoal	NTYS11AA70
Telephone number label and lens kit	NTYS12AA
2.3 m (7 ft) CAT5 Ethernet cable	NTYS13AA

The IP Phone 1140E can be powered either by Power Over Ethernet (POE) or powered through an external power supply. Order the external power supply separately.

**Table 3**  
**1100 series phones separably orderable parts**

Item	Order number
<b>Power adapter contents include:</b>	
Global power supply (optional)	N0023000
<b>AC cord package includes one of the following:</b>	
1.8 m (5.9 ft), 10 amp, IEC320-C13 North America	NTYS14AA
3 m (9.9 ft), 125 VAC 13 amp, NA power cord, NEMA North America, Middle East, Taiwan, Philippines, Thailand, and Japan	NTTK14AB
2.4 m (8 ft), 240 VAC 10 amp, ANZ power cord AS-3, Australia, New Zealand	NTTK15AA
250 VAC, Option 11C Standard European power cord, Other EMEA, Kenya, Korea, Thailand, Indonesia, Vietnam, India, Pakistan	NTTK16AB
3 m (9.9 ft) 125 VAC, Option 11C Swiss power cord Switzerland	NTTK17AB
240 VAC, Option 11C UK power cord Hong Kong, Ireland, United Kingdom, Singapore, Malaysia, Bangladesh, Brunei, Sri Lanka	NTTK18AB
3 m (9.9 ft), 125 VAC, Option 11C Denmark power cord Denmark	NTTK22AB



#### CAUTION

The IP Phone 1140E must be plugged into a 10/100-BaseT Ethernet jack. Severe damage occurs if this IP Phone 1140E is plugged into an ISDN connection.

- 4 Ensure that the location meets the network requirements:
  - a DNS server and a DHCP server with DHCP relay agents installed, configured, and running. It is possible to run the IP

Phone 1140E without these servers in MCS 5100 Release 3.5, but Nortel recommends using these servers to aid in the deployment and configuration of the IP Phone 1140E with SIP Firmware. Using DHCP and DNS servers with CS 2000 network is recommended but not mandatory.

- An Ethernet connection to a network with an appropriate SIP proxy server.
- One of the following file servers used as a Provisioning server:
  - TFTP server
  - FTP server
  - HTTP server

Only a TFTP server can be used for an initial UNISTim-to-SIP Firmware conversion. An IP Phone 1140E with SIP Firmware can operate with a TFTP, FTP, or HTTP file server.

---

—End—

---





---

## Configure the provisioning server

---

### ATTENTION

If you have UNISim Firmware on your IP Phone 1140E, the firmware must be converted from UNISim to SIP before you proceed with the following instructions. See the chapter "[Upgrade and convert the IP Phone 1140E firmware](#)" (page 67) for instructions on how to convert the firmware on an IP Phone 1140E from UNISim to SIP.

If the IP Phone 1140E is installed with SIP Firmware, further SIP Firmware upgrades can be done with a TFTP, an FTP, or an HTTP server.

### How provisioning works

Provisioning is performed without interaction with the call server. The IP Phone 1140E with SIP Firmware connects directly with the provisioning server in order to retrieve firmware files and configuration files. In this case, the provisioning server is not to be confused with the IP Client manager on the call server. The methods of provisioning are:

- Automatic provisioning at power-up: After the IP Phone 1140E powers up or is reset, it checks the provisioning server for the latest files.
- Provisioning through user interaction: The end user can manually check for updates by pressing the **Services** Context-sensitive soft key and selecting **SystemSystem** . In the menu select **Check for Updates**.
- Automatic provisioning at a preconfigured time: The IP Phone 1140E with SIP Firmware checks for updates every 24 hours, at a time specified by a parameter in the device configuration file.

The following steps are taken when provisioning updates occur. The IP Phone 1140E with SIP Firmware:

1. connects to the provisioning server
2. retrieves the provisioning file (1140eSIP.cfg) from the provisioning server
3. reads and acts upon the content of the provisioning file and decides whether any other file is needed, based on a set of rules. If files need to be downloaded to the IP Phone 1140E, a new file transfer session starts

for each file to be downloaded. The provisioning file (1140eSIP.cfg) can contain commands that prompt for confirmation before a file is downloaded.

## Download the SIP Firmware to the provisioning server

To download the SIP Firmware, follow the steps in the next procedure.

### Procedure 3

#### Downloading SIP Firmware for IP Phone 1140E from the Nortel Web site

---

Step	Action
------	--------

---

- |   |   |
|---|---|
| 1 | Go to <a href="http://www.nortel.com/support">www.nortel.com/support</a> .  |
| 2 | Log on to the Nortel Web site with a valid Nortel User ID and Password.<br><br>The <b>Technical Support</b> page appears.   |
| 3 | Enter IP Phone 1140E in the <b>Knowledge and Solution Engine</b> box.   |
| 4 | Select <b>Software</b> in the <b>All types</b> scroll down menu.  |
| 5 | Press the gray arrow at the end of the <b>Knowledge and Solution Engine</b> box to obtain the <b>Search Results</b> .   |
| 6 | From the <b>Search Results</b> , select the appropriate version of the SIP Firmware for the IP Phone 1140E, for example, <b>SIP IP Phone 1140E Release 0625C1HD26.bin</b> . |
| 7 | Place the selected firmware on the provisioning server.   |
- 


—End—

---

## Create the SIP provisioning file on the provisioning server

The provisioning file is downloaded from the provisioning server to the IP Phone 1140E every time the IP Phone 1140E checks for updates. The provisioning file is a clear text file that has the naming convention 1140eSIP.cfg. The following is an example of a provisioning file:

**Figure 4**  
**Sample provisioning file**

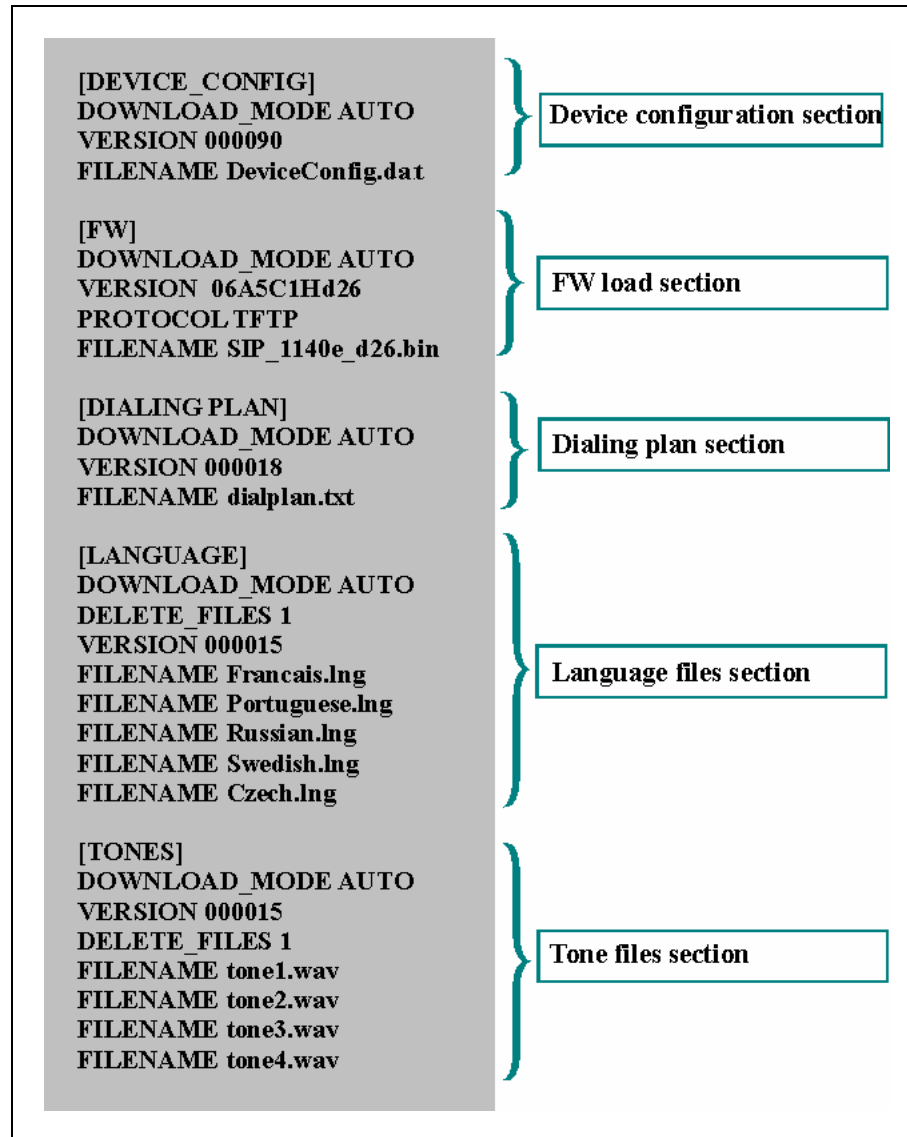

**Table 4**  
**Provisioning file supported sections**

[DEVICE_CONFIG]	Device configuration file
[LANGUAGE]	Downloadable language files (more than one can be specified in each section)
[FW]	Firmware image
[DIALING_PLAN]	Dialing plan
[TONES]	Downloadable tones (.wav files)

Provisioning is performed using the commands in the 1140eSIP.cfg configuration file. The configuration file can have multiple sections.

**Note:** The maximum length of a line item in the configuration file is 80 characters. If a line item with more than 80 characters is encountered when parsing the configuration file, the remaining portion of the file following that line item will be ignored.

'#' is used to indicate a comment. Anything preceeding a '#' is a comment.

Each section in the configuration file defines rules for different file types. A section starts with a [SECTION NAME] to specify rules for each file type. For example: [FW].

A section is a mandatory field. Parsing of download rules for each file type starts with finding this key word. Currently, the following sections are supported by the IP Phone 1140E with SIP Firmware:

- **[FW]** section for the firmware load download
- **[DEVICE\_CONFIG]** section for the device configuration
- **[DIALING\_PLAN]** section for the dialing plan files
- **[LANGUAGE]** section for the language prompts files
- **[TONES]** section for the downloadable tone files

Firmware [FW] image files originate from Nortel only and are authenticated during firmware download. If the FW authentication fails, the IP Phone 1140E displays an error message and continues operation with the existing FW image.

Device configuration files are used to set various parameters in the IP Phone 1140E.

Dialing plan files are used for configuring dialing patterns and the format of originated URIs in the SIP message.

**Note:** Some call servers do not yet support SIP URI dialing.

Language files are simple text files containing all text prompts used by the IP Phone 1140E. Language files are used for the localization of the IP Phone 1140E without firmware upgrade. Each language file has a header that contains a firmware load version with which this file is associated. Language files are signed by Nortel and are authenticated by the firmware for security reasons.

Tones files are standard in the Telecommunications Standardization sector of the International Telecommunications Union (ITU-T). The set supports custom tone files. The tone files must be WAV files with the following specification: A-law or u-law (8.0 kHz, 8-bit, mono or 16.0 kHz, 16 bit mono). The WAV files can be created and downloaded to the IP Phone 1140E. These files are not authenticated by the IP Phone 1140E.

Mandatory keywords in the Provisioning file are:

- **VERSION [xxxxxx]**, where xxxxxx is a six- to ten-digit number representing the version of the file on the server. The version of the module is specified in this field. The command is used for version comparison in AUTO mode. VERSION is mandatory for all sections. In the FW section, the firmware version of the load located on the provisioning server must be entered in this field. For all other sections, VERSION is just a counter that can be incremented if it is necessary to download a new file version.



#### CAUTION

The version number is stored permanently on the IP Phone 1140E until a higher version number is downloaded or until the version number is deleted using the **Srvcs, System, Erase User Data** menu selection on the IP Phone 1140E. This prevents a new file from being downloaded if a lower version number is used in the Provisioning File.

- **DOWNLOAD\_MODE [AUTO | FORCED]** defines whether the version is checked. This command is optional. If this command is not present, AUTO mode is used as the default.
  - **AUTO** - This mode compares the version of the module from the VERSION field and the version of the module version stored in the FLASH memory of the IP Phone 1140E. The file download is initiated only if the version specified is higher than the current version stored in the IP Phone 1140E. If the version is not applicable, as in the case of language files, the date of the file must be used for the decision.



### CAUTION

The version number stored in the FLASH is permanent until a higher number is downloaded from the Provisioning file or you select **Srvcs, System, Erase User Data** on the IP Phone 1140E.

- **FORCED** - This mode forces the firmware download process. **FORCED** can be used for firmware downgrade procedures.

**Note:** In **FORCED** or **AUTO DOWNLOAD\_MODE**, the version number is overwritten with each firmware download.

- **FILENAME [filename]** specifies the file name to be downloaded for this section. For the language and tone section, the use of multiple filenames is allowed.

Optional keywords in the Provisioning file are:

- **PROMPT [YES | NO]** is used to indicate if the IP Phone 1140E should prompt the user for an update before the operation is performed. This command is optional with the default set to **NO**.
  - **YES** - enables the prompt
  - **NO** - disables the prompt
- **PROTOCOL [TFTP | FTP | HTTP]** defines the protocol used to download the file. The IP Phone 1140E with SIP Firmware supports TFTP, FTP and HTTP protocols for file download. This command is optional. If it is not present, the default protocol TFTP is used.

If using FTP or HTTP, **SRV\_USER\_NAME** and **SRV\_USER\_PASS** are also key words. These commands specify the credential used to login to the file server for file download. If not present, the protocol default credential is used (no credential for TFTP and HTTP and anonymous with no password for FTP).

- **SERVER\_IP [address]** allows the IP Phone 1140E to connect to the specified IP address or name of the server for which the file can be downloaded. If the address is not specified, the **SERVER\_IP** that is used is the same **SERVER\_IP** that is used to download the provisioning file.
- **DELETE\_FILES [YES | NO]**, if present, erases the language and tone files stored in the IP Phone 1140E before new files are downloaded. Otherwise, new files with different names are added without erasing existing files. This command is optional. Note that there is a hard limit of 5 language files and 5 tone files that can be stored in the IP Phone

1140E. When the limits are exceeded, no new file can be accepted for download.

- **YES** - erases the existing language and tone files
- **NO** - does not erase existing language and tone files

- **SRV\_USER\_NAME [username]** - If the protocol is FTP or HTTP, this keyword specifies the user name to log on to the server.
- **SRV\_USER\_PASS [password]** - If the protocol is FTP or HTTP, this keyword specifies the password to log on to the server.

The downloading of these files is initiated when an IP Phone 1140E is powered on, when an automatic check for updates is invoked, or when you select **Srvcs, System, Erase User Data**. Any of these actions causes the IP Phone 1140E to contact the provisioning server and attempt to read the Provisioning file. A Soft Reset (**Srvcs, System, Reset Phone**) does not cause the IP Phone 1140E to retrieve the Provisioning file.

## Create the device configuration file on the provisioning server

After the IP Phone 1140E downloads the provisioning file, the IP Phone 1140E reads the [DEVICE\_CONFIG] section and is directed to download the device configuration file.

The device configuration file is a clear text file and the naming convention is defined by the administrator. See the FILENAME keyword in the [DEVICE\_CONFIG] section of the SIP provisioning file.

The following is an example of a device configuration file.

**Figure 5**  
**Sample device configuration file**

```
# Server and Network configuration commands
DNS_DOMAIN corp.yourcompany.com
SIP_DOMAIN1 yourcompany.com
SERVER_IP1_1 10.1.2.3
SERVER_IP1_2 10.1.2.4
SERVER_PORT1_1 5060
SERVER_PORT1_2 5060
SERVER_RETRIES1 3
DEF_USER1 user1

# Voice Feature configuration commands
VMAIL 5555
VMAIL_DELAY 300

# Administrative feature commands
BANNER MCS_4.0
AUTOLOGIN_ENABLE YES

# Voice Application commands
DEF_LANG English
DEF_AUDIO_QUALITY High
ENABLE_BT YES
ENABLE_3WAY_CALL NO
```

The next table provides a summary of the commands that can be used in the device configuration file. The exact syntax of each command follows the table.

**Table 5**  
**Device configuration commands**

<b>Server and network configuration commands</b>	SIP_DOMAIN1	SERVER_PORT3_2
	SIP_DOMAIN2	SERVER_PORT4_1
	SIP_DOMAIN3	SERVER_PORT4_2
	SIP_DOMAIN4	SERVER_PORT5_1
	SIP_DOMAIN5	SERVER_PORT5_2
	SERVER_IP1_1	SERVER_RETRIES1



	SERVER_IP1_2 SERVER_IP2_1 SERVER_IP2_2 SERVER_IP3_1 SERVER_IP3_2 SERVER_IP4_1 SERVER_IP4_2 SERVER_IP5_1 SERVER_IP5_2 SERVER_PORT1_1 SERVER_PORT1_2 SERVER_PORT2_1 SERVER_PORT2_2 SERVER_PORT3_1	SERVER_RETRIES2 SERVER_RETRIES3 SERVER_RETRIES4 SERVER_RETRIES5 DNS_DOMAIN DEF_USERS DEF_USER1 DEF_USER2 DEF_USER3 DEF_USER4 DEF_USER5 UPDATE_USERS SIP_PING
<b>Feature configuration commands</b>	VMAIL VMAIL_DELAY AUTOLOGIN_ENABLE AUTO_UPDATE AUTO_UPDATE_TIME AUTO_UPDATE_TIME_RANGE TRANSFER_TYPE REDIRECT_TYPE ENABLE_PRACK	MAX_INBOX_ENTRIES MAX_OUTBOX_ENTRIES MAX_REJECTREASONS MAX_CALLSUBJECT MAX_PRESENCENOTE DEF_LANG MAX_IM_ENTRIES MAX_ADDR_BOOK_ENTRIES ADDR_BOOK_MODE DEF_AUDIO_QUALITY
<b>Feature configuration commands (continued)</b>	PROXY_CHECKING ENABLE_BT AUTH_METHOD BANNER FORCE_BANNER DST_ENABLED TIMEZONE_OFFSET FORCE_TIME_ZONE IM_MODE	HOLD_TYPE ENABLE_3WAY_CALL DISABLE_PRIVACY_UI DISABLE_OCT_ENDDIAL FORCE_OCT_ENDDIAL SNTP_ENABLE SNTP_SERVER MADN_TIMER MADN_DIALOG

	IM_NOTIFY DEF_DISPLAY_IM	DEFAULT_CFWD_NOTIFY FORCE_CFWD_NOTIFY
<b>QoS and ToS commands</b>	DSCP_CONTROL 802.1P_CONTROL DSCP_MEDIA	802.1P_MEDIA DSCP_DATA 802.1P_DATA
<b>Tone configuration commands</b>	DIAL_TONE RINGING_TONE BUSY_TONE	FASTBUSY_TONE CONGESTION_TONE
<b>NAT configuration commands</b>	NAT_SIGNALLING NAT_MEDIA NAT_TTL	STUN_SERVER_IP1 STUN_SERVER_IP2 STUN_SERVER_PORT1 STUN_SERVER_PORT2
<b>Voice Quality Monitoring (VQMon) configuration commands</b>	VQMON_PUBLISH VQMON_PUBLISH_IP LISTENING_R_ENABLE LISTENING_R_WARN LISTENING_R_EXCE PACKET_LOSS_ENABLE PACKET_LOSS_WARN	PACKET_LOSS_EXCE JITTER_ENABLE JITTER_WARN JITTER_EXCE DELAY_ENABLE DELAY_WARN DELAY_EXCE SESSION_RPT_EN SESSION_RPT_INT
<b>System commands</b>	ADMIN_PASSWORD	

### Device configuration commands



#### CAUTION

The syntax of the device configuration file is case sensitive. Verify that the commands entered follow the case defined in this document.

### Server and network configuration commands

- **SIP\_DOMAIN[x] [domain\_name]** preconfigures the proxy domain name for all servers. The same configuration can be done through the domain configuration menu on the IP Phone 1140E.  
— **x** - the number of the SIP domain number from 1 to 5.

— **domain\_name** - the proxy domain name for all servers.

**Note:** SIP\_DOMAIN[x] is provisioned after user logout.

- **SERVER\_IP[x]\_ [y]\_ip\_address]** configures the primary and secondary IP address for each domain, two proxies for each domain.
  - **x** - the domain number from 1 to 5.
  - **y** - the corresponding primary and secondary IP addresses. y=1 indicates the primary address and y=2 indicates the secondary address.
  - **ip\_address** - the IP address of the SIP proxy server.
- **SERVER\_PORT[x]\_ [y] [port\_number]** configures the signaling ports for each proxy.
  - **x** - the domain number.
  - **y** - the corresponding primary and secondary IP addresses. y=1 indicates the primary address and y=2 indicates the secondary address.
  - **port\_number** - the SIP proxy signaling port (default is 5060).
- **SERVER\_RETRIES[x] [number\_of\_retries]** confirms the number of retries for each domain. The default number of retries is 3.
  - **x** - the domain number from 1 to 5.
  - **number\_of\_retries** - the number of retry attempts to connect to the proxy server.
- **DNS\_DOMAIN [domain]** is the DNS domain of the IP Phone 1140E.
- **DEF\_USERS[x] [user\_name]** allows you to enter the default user name for all domains. When the device configuration file gets downloaded, the default user name is used when logging in.
  - **x** - the domain number from 1 to 5.
  - **user\_name** - the default user name.
- **UPDATE\_USERS [YES | NO]** affects the default user names stored in the IP Phone 1140E. If this flag is set to YES, the default user names are overwritten each time a new device configuration file is downloaded.
  - **YES** - the default user names are overwritten each time a new device configuration file is downloaded.
  - **NO** - the default user names are not overwritten each time a new device configuration file is downloaded.

- **SIP\_PING [YES | NO]** The SIP\_PING configuration value is used to maintain server heartbeat detection and to keep a firewall pinhole open.

When used for server heartbeat detection, the IP Phone 1140E periodically pings the SIP Proxy and awaits a response. When three attempts to ping the SIP Proxy fail, the IP Phone 1140E begins a failover process and attempts to connect to the next configured SIP Proxy IP in the same domain.

When a NAT TRAVERSAL method is selected, the SIP\_PING configuration value also helps keep a firewall pinhole open.

### ATTENTION

Decide carefully whether SIP\_PING usage is appropriate for your environment. Even when SIP\_PING is not used for NAT TRAVERSAL, it is highly likely that you must keep SIP\_PING enabled for server heartbeat detection.

If the IP Phone 1140E is behind a firewall, it is very likely that you must keep SIP\_PING enabled, unless an alternate method of keeping the firewall pinhole open is used.

The default value is yes if not specified in the device configuration file. If SIP\_PING is changed in the Device configuration file, the IP Phone 1140E must be rebooted for the change to take effect.

- **YES** - enables pinging
- **NO** - disables pinging

### Feature configuration commands

- **VMAIL [vmail\_number]** is the voice mail address which can be the URI or the DN number of the voice mail server. This command takes a string as a parameter. This is the default link for a new user profile only. Individual users can customize the link through **Prefs, Message Options, Voice Mail Settings**. This command has no effect on the user profiles after it is created.
  - **vmail\_number** - the number or URI of the voicemail server.
- **VMAIL\_DELAY[x]** is a delay, configured in milliseconds, between when the voice mail server answers the call and the start of dialing the voice mail user ID. The default value is 1000ms.
  - **x** - the delay in milliseconds
- **AUTOLOGIN\_ENABLE [YES | NO]** allows the IP Phone to automatically login after the IP Phone has been restarted, either by the software or by

external sources, such as a power failure. A user can be logged out due to the proxy server going down or during a firmware upgrade.

- **YES** - turns on the auto login feature.
- **NO** - turns off the auto login feature.
- **AUTO\_UPDATE [YES | NO]** is a command to enable or disable the automatic updating of the IP Phone 1140E with SIP Firmware configuration files from the provisioning server. Enabling this command causes the IP Phone 1140E with SIP Firmware to check for updates once every day. The default is disabled.
  - **YES** - turns on the AUTO\_UPDATE feature.
  - **NO** - turns off the AUTO\_UPDATE feature.
- **AUTO\_UPDATE\_TIME [x]** is the actual time in seconds, starting from midnight, before an automatic update occurs. Each IP Phone 1140E adds random numbers to the time specified by this command so every IP Phone 1140E does not try to access the provisioning server at the same time. By default the automatic update feature is disabled (see AUTO\_UPDATE\_RANGE).
  - **x** - the time after midnight that the automatic update occurs.
- **AUTO\_UPDATE\_TIME\_RANGE [x]** is the range in hours, from the AUTO\_UPDATE\_TIME whereby an IP Phone 1140E checks for updates from the server. The default range is 1 hour.
  - **x** - the range in hours when the IP Phone checks for updates from the server. The range can be from 1 to 6 hours.
- **TRANSFER\_TYPE [MCS | STANDARD]** is used to configure the IP Phone 1140E to activate Nortel conference server-assisted attended transfers, instead of the industry standard method of attended transfers. The default setting is MCS.
  - **MCS** - the typical attended transfer used by Nortel proxies. MCS uses a conference server to do the attended transfer.
  - **STANDARD** - the standard method of a transfer. This method does not involve a conference server.
- **REDIRECT\_TYPE [MCS | RFC3261]** is a command used to select different protocols for set redirection. The default setting is MCS.
  - **MCS** - when the IP Phone 1140E receives either 301 (moved permanently) or 302 (moved temporarily) during registration, it is assumed the IP Phone 1140E is moved to a new MCS 5100 system

(proxy+registrar) and all subsequent messages are sent to the new address.

- **RFC3261** - the IP Phone 1140E assumes that, if during registration, a 301 (moved permanently) is received, the message contains a new registrar address. The IP Phone 1140E tries to register to the registrar using the existing proxy.
- **ENABLE\_PRACK [YES | NO]** PRACK is utilized to make some SIP messages reliable and requires that an ACK be sent with many SIP messages. ENABLE\_PRACK is often utilized to verify that early media is being received. See RFC 3262 for details.

**Note 1:** ENABLE\_PRACK must be set to NO when connected to the MCS 5100 Release 3.5 system.

**Note 2:** ENABLE\_PRACK is provisioned after user logout.

- **NO** - disables PRACK and is the default value.
- **YES** - enables PRACK.
- **PROXY\_CHECKING [YES | NO]** enables and disables extra security checking when incoming requests are sent to the IP Phone 1140E. The IP Phone 1140E with SIP Firmware always sends requests through an outgoing proxy. However, it is possible, through this configuration, to be able to accept an incoming request directly or through an incoming proxy.
  - **YES** - means that the request must come directly from the proxy server. YES is the default to enable proxy checking.
  - **NO** - means the request can be sent directly to the IP Phone 1140E. (NO is only suitable in a few situations).
- **ENABLE\_BT [YES | NO]** is a flag to enable and disable Bluetooth support in the IP Phone 1140E.
  - **YES** - enables Bluetooth.
  - **NO** - disables Bluetooth. The default is NO.

Note that the IP Phone 1140E hardware does not support Bluetooth and this command is ignored.

- **DEF\_AUDIO\_QUALITY [Low | Medium | High]** is a command used for setting the default audio quality used for each new call. Audio quality can be changed when the call is active. If this command is not present in the configuration file, the IP Phone 1140E uses High quality as its default value. The possible parameters for this command are High, Medium, and Low. If any other parameter is entered or these commands are misspelled, the IP Phone 1140E uses High as the default setting.

The following codecs are used for each selection:

- **Low** - G729 ptime 30.
  - **Medium** - G711 ptime 30.
  - **High** - G711 ptime 20.
- **AUTH\_METHOD [AUTH | AUTH\_INT]** is used to configure the SIP authentication method.
    - **AUTH** - only authenticates (username/password)
    - **AUTH\_INT** - authentication plus integrity checking (an MD5 hash of the entity is also computed and checked).
  - **BANNER [banner\_text]** preconfigures the banner on the IP Phone 1140E. Use a text string to set the banner. For example, BANNER ABC Company sets the banner to ABC Company. The text string can have a maximum of 24 characters.
    - **banner\_text** - an ASCII string displayed on the screen of the IP Phone 1140E with SIP Firmware.
  - **FORCE\_BANNER [YES | NO]** is set by the system administrator through the configuration file. If FORCE\_BANNER is set to YES, the banner from the configuration file is reloaded each time the IP Phone 1140E powers up, even if the user changes the banner manually.
    - **YES** - causes the banner set by the administrator to override any banner set by the user.
    - **NO** - allows the user to set the banner.
  - **DST\_ENABLED [YES | NO]** enables and disables the daylight saving time mechanism. The time received from the server is GMT and is converted to the proper timezone by the IP Phone 1140E. If the Daylight Saving Time feature is enabled, the IP Phone 1140E automatically calculates the DST time at the appropriate date and converts the time to and from DST. The calculations used are based on the new rules applicable to DST in 2007. The IP Phone 1140E is set up to use the North American DST scheme.
    - **YES** - enables daylight savings time.
    - **NO** - disables daylight savings time.
  - **TIMEZONE\_OFFSET [x]** is used to set the current time zone offset from GMT in seconds. TIMEZONE\_OFFSET takes a number as a parameter. For example, TIMEZONE\_OFFSET -25200 sets the time zone offset to MST, which is GMT-7 ( $-7 \times 3600 = -25200$  seconds).

**Table 6**  
**Time zone offset**

Location	Time zone offset (seconds)
(GMT-10:00) Hawaii	-36000
(GMT-09:00) Alaska	-32400
(GMT-08:00) Pacific time (US and Canada)	-28800
(GMT-07:00) Mountain time (US and Canada)	-25200
(GMT-06:00) Central time (US and Canada)	-21600
(GMT-05:00) Eastern time (US and Canada)	-18000
(GMT-04:00) Atlantic time (US and Canada)	-14400
(GMT-03:00) Brasilia, Buenos Aires	-10800
(GMT+00:00) Greenwich, Dublin, Lisbon, London	0
(GMT+01:00) Amsterdam, Berlin, Rome, Stockholm, Madrid, Paris	3600
(GMT+02:00) Athens, Istanbul, Cairo, Helsinki, Jerusalem	7200
(GMT+03:00) Moscow, St. Petersburg	10800
(GMT+05:30) Bombay, Calcutta, Madras, New Delhi	18000
(GMT+08:00) Beijing, Chongqing, Hong Kong, Singapore, Taipei	28800
(GMT+09:00) Osaka, Sapporo, Tokyo, Seoul	32400
(GMT+10:00) Canberra, Melbourne, Sydney	36000
(GMT+12:00) Auckland, Wellington	43200

- **FORCE\_TIME\_ZONE [YES | NO]** allows you to force the timezone offset on each user's IP Phone 1140E. The default is NO.
  - **YES** - forces the IP Phone to use the TIMEZONE\_OFFSET specified in the device configuration file.
  - **NO** - uses the value stored in the user preferences.
- **IM\_MODE [ENCRYPTED | TEXT | SIMPLE | DISABLED]** is used to configure the mode of instant messaging (IM). The default setting is ENCRYPTED.
  - **ENCRYPTED** - instant messages are sent encrypted.
  - **TEXT** - instant messages are sent as text.
  - **SIMPLE** - instant messages are sent using SIP for Instant Messaging and Presence Leveraging Extensions (SIMPLE) protocol.



- **DISABLED** - instant messaging is turned off and no instant messages can sent or received.
- **IM\_NOTIFY [YES | NO]** is used to turn on or off the Blue LED indicator upon receipt of an instant message.
  - **YES** - the Blue LED functions when an instant message is received.
  - **NO** - the Blue LED does not function when an instant message is received.

**Note:** If IM\_NOTIFY is disabled, the Blue LED continues to operate for other features.
- **DEF\_DISPLAY\_IM [YES | NO]** enables or disables the display of instant messages (IM). The default setting is NO.
  - **YES** - enables display of IMs.
  - **NO** - disables display of IMs.
- **MAX\_INBOX\_ENTRIES [x]** is used to restrict the maximum number of inbox entries and takes a number as a parameter. For example, **MAX\_INBOX\_ENTRIES 100** limits the number of entries in the inbox to 100. The default limit is 100.
  - **x** - the maximum number of in box entries.
- **MAX\_OUTBOX\_ENTRIES [x]** is used to restrict the maximum number of outbox entries and takes a number as a parameter. For example, **MAX\_OUTBOX\_ENTRIES 100** limits the number of entries in the outbox to 100. The default limit is 100.
  - **x** - the maximum number of outbox entries.
- **MAX\_REJECTREASONS [x]** is used to restrict the maximum number of Call Decline Reasons (**Prefs, Feature Options, Call Decline Reasons**) and takes a number as a parameter. The default limit is 20.
  - **x** - the maximum number of reject reasons.
- **MAX\_CALLSUBJECT [x]** is used to restrict the maximum number of call subjects (**Prefs, Feature Options, Call Subject**) and takes a number as a parameter. The default limit is 20.
  - **x** - the maximum number of call subject reasons.
- **MAX\_PRESENCENOTE [x]** is used to restrict the maximum number of presence notes and takes a number as a parameter. The default limit is 20.

- **x** - the maximum number of presence notes that an IP Phone 1140E can receive.
- **DEF\_LANG [language]** is a command used for setting the default language. Select one of the supported languages from the language list downloaded. Note that the corresponding language file must be downloaded and stored in the IP Phone 1140E through the [LANGUAGE] section in Provisioning. If the language file is not stored in the IP Phone 1140E, the default language English is used.
  - **language** - the default language used.
- **MAX\_IM\_ENTRIES [x]** is used to set the maximum number of instant message (IM) entries and takes a number as a parameter. Once the maximum number is reached, the oldest IM is deleted without any user notification. The default limit is 999.
  - **x** - the maximum number of instant messages.
- **MAX\_ADDR\_BOOK\_ENTRIES [x]** is used to set the maximum number of entries in the address book and takes a number as a parameter. The default limit is 100.
  - **x** - the maximum number of address book entries.
- **ADDR\_BOOK\_MODE [NETWORK | LOCAL | BOTH]** is a command to choose the address book that is used to search for other users. The default setting is NETWORK.
  - **NETWORK** - downloads the user's address book from the network (MCS). New address book entries are uploaded to the network.
  - **LOCAL** - creates a user address book and stores it locally on the IP Phone
  - **BOTH** - attempts to download a network address book and keep a copy on the IP Phone. If a network address book is available, the IP Phone 1140E functions as if NETWORK mode has been selected.
- **HOLD\_TYPE [RFC2543 | RFC3261]** is used to select the protocol to hold a call. The default setting is RFC3261.
  - **RFC2543** - RFC 2543 is a standard protocol of the Internet Engineering Task Force (IETF).
  - **RFC3261** - RFC3261 is a standard protocol of the IETF.
- **ENABLE\_3WAY\_CALL [YES | NO]** is a flag to enable or disable local phone-based three-way calling for three-party conferences.

- **YES** - enables local (phone-based) three-way calling for three-party conferences. YES is the default.
- **NO** - disables local (phone-based) three-way calling.
- **DISABLE\_PRIVACY\_UI [YES | NO]** is a flag to disable the privacy setting in UI menus. Disabling the privacy setting in UI menus disables the user ability to set privacy options.
  - **YES** - disables the privacy setting in the UI menus.
  - **NO** - enables the privacy setting in the UI menus. NO is the default.
- **DISABLE\_OCT\_ENDDIAL [YES | NO]** is a flag used to configure the pound (#) key. The default setting is YES.
  - **YES** - the pound (#) key initiates dialing when pressed after a telephone number is entered.
  - **NO** - the pound (#) key functions as any other digit or character on the dial pad typically used in networks that use vertical service codes or access codes.
- **FORCE\_OCT\_ENDDIAL [YES | NO]** is a flag used to override attempts to change the function of the pound (#) key on the Graphical User Interface (GUI). The default setting is NO.
  - **YES** - overrides attempts to change the function of the pound (#) key on the GUI.
  - **NO** - does not override a change of the function of the pound (#) key on the GUI.
- **SNTP\_ENABLE [YES | NO]** allows the IP Phone 1140E to obtain the time and date from an NTP server. The default is NO.

The IP Phone 1140E updates the time once every 24 hours from the NTP server. If the IP Phone 1140E cannot contact the server, the IP Phone 1140E tries every 15 minutes up to a maximum of 6 attempts, and then hourly attempts are made. If **SNTP\_ENABLE** is set to NO the IP Phone 1140E tries to retrieve the time and date from the SIP proxy server. However, not all SIP proxy servers support this method of retrieving the time and date.

  - **YES** - enables NTP.
  - **NO** - disables NTP.
- **SNTP\_SERVER [ip\_address]** is the IP address or FQDN of the NTP server that provides the time and date to the IP Phone 1140E. If this is not specified, the IP Phone does not generate any NTP requests.

- **ip\_address** - the IP address of the NTP server in either Fully Qualified Domain Name (FQDN) or non-FQDN format.
- **MADN\_TIMER [x]** is used to set the MADN polling timer interval (the interval at which the IP Phone 1140E attempts to determine the MADN group of the logged-in user). The minimum value for the polling interval is 900 seconds (15 minutes). The default value is 1800.
  - **x** - the time delay (in seconds) between queries to find the MADN group DN of a user. The minimum value 900.
- **MADN\_DIALOG [YES | NO]** is used to set the SIP URI or the GROUP DN for the subscription to the dialog event. The default value is NO.
  - **YES** - subscribes to the dialog event using the SIP URI of the user.
  - **NO** - subscribes to the dialog event using the group of the user.

**Note:** The SIP URI is used to subscribe for MADN support for CS 2000.

- **DEFAULT\_CFWD\_NOTIFY [YES | NO]** is used to configure the "ring splash" which occurs when either local call forwarding (MCS 5100) or network-based call forwarding have been enabled (CS 2000, CS 2100). If this configuration value is enabled, the IP Phone 1140E plays an abbreviated ring tone to remind the user that a call has been forwarded. This configuration value only effects users when their user profile is first created, unless the **FORCE\_CFWD\_NOTIFY** flag is also used. The default setting is NO.
  - **YES** - a brief ring splash plays when a call is forwarded.
  - **NO** - the ring splash is not be played.
- **FORCE\_CFWD\_NOTIFY [YES | NO ]** allows the administrator to force the behavior of the **DEFAULT\_CFWD\_NOTIFY** value on all users who login to the IP Phone 1140E. The default setting is NO.
  - **YES** - the **DEFAULT\_CFWD\_NOTIFY** configuration value is forced into effect for the user.
  - **NO** - the configuration value is not be forced into effect for the user.

### QoS and ToS commands

- **DSCP\_CONTROL [x]** is a value entered in decimal format between -1 and 63. If the value is -1, the DSCP value is picked up by the Service Package. The default value is 40.
  - **x** - a value from -1 to 63 indicating the DSCP value.

- **802.1P\_CONTROL [x]** is a value entered in decimal format between -1 and 7 representing the 802.1P value in the SIP signaling packets. If the value is -1, the 802.1P value is retrieved from the Service Package. The default value is 6.
  - **x** - the value from -1 to 7 indicating the 802.1P value.
- **DSCP\_MEDIA [x]** is a value entered in decimal format between -1 and 63 representing the DSCP value in the Real-time Transfer Protocol packets. If the value is -1, the DSCP value is retrieved from the Service Package. The default value is 44.
  - **x** - a value from -1 to 63 indicating the DSCP value.
- **802.1P\_MEDIA [x]** is a value entered in decimal format between -1 and 7 representing the 802.1P value in the IP Phone 1140 Media (RTP) packets. If the value is -1 then the 802.1P value is retrieved from the Service Package is the 802.1 setting for media Real-time Transport Protocol (RTP). The default value is -1.
  - **x** - a value from -1 to 7 indicating the 802.1P value.
- **DSCP\_DATA [x]** is a value entered in decimal format between -1 and 63 representing the DSCP value in the provisioning packets. If the value is -1, the DSCP value is retrieved from the Service Package. The default value is 40.
  - **x** - a value from -1 to 63 indicating the DSCP value.
- **802.1P\_DATA [x]** is a value entered in decimal format between -1 and 7 representing the 802.1P value in the provisioning packets. If the value is -1, the 802.1P value is retrieved from the Service Package. The default value is 6.
  - **x** - a value from -1 to 7 indicating the 802.1P value.

### Tone configuration commands

- **DIAL\_TONE [frequency1 | frequency2 | on\_time | off\_time]** is used to select the tone advising the caller that the exchange is ready to receive call information and invites the user to start sending call information. You can select the country specific tone. The default tone is the North American tone.
  - **frequency1** - the frequency of tone 1.
  - **frequency2** - the frequency of tone 2.
  - **on\_time** - the duration of the tone when it is on. A -1 indicates a continuous tone.
  - **off\_time** - the duration when no tone is played.

The following are examples of DIAL\_TONE:

1. 350,440;-1 (350 and 440 Hz continuous tone)

- **RINGING\_TONE [frequency1 | frequency2 | on\_time | off\_time]** is used to select the tone advising the caller that a connection is made and a calling signal is applied to a telephone number or service point. You can select the country specific tone. The default tone is the North American tone.

- **frequency1** - the frequency of tone 1.

- **frequency2** - the frequency of tone 2.

- **on\_time** - the duration of the tone when it is on. A -1 indicates a continuous tone.

- **off\_time** - the duration when no tone is played.

The following are examples of RINGING\_TONE:

1. 440,480; 2000,4000 (440 and 480 Hz with 2 seconds on, 4 seconds off)

- **BUSY\_TONE [frequency1 | frequency2 | on\_time | off\_time]** is used to select the tone advising the caller that the telephone number is busy. You can select the country specific tone. The default tone is the North American tone.

- **frequency1** - the frequency of tone 1.

- **frequency2** - the frequency of tone 2.

- **on\_time** - the duration of the tone when it is on. A -1 indicates a continuous tone.

- **off\_time** - the duration when no tone is played.

- **FASTBUSY\_TONE [frequency1 | frequency2 | on\_time | off\_time]** is used to select the tone advising the caller that the telephone number is busy. It is fast in cadence or frequency. You can select the country specific tone. The default tone is the North American tone.

- **frequency1** - the frequency of tone 1.

- **frequency2** - the frequency of tone 2.

- **on\_time** - the duration of the tone when it is on. A -1 indicates a continuous tone.

- **off\_time** - the duration when no tone is played.

- **CONGESTION\_TONE [frequency1 | frequency2 | on\_time | off\_time]** is used to select the tone advising the caller that the groups of lines or

switching equipment necessary for setting up the required call, or for the use of a specific service, are temporarily engaged. You can select the country specific tone. The default tone is the North American tone.

- **frequency1** - the frequency of tone 1.
- **frequency2** - the frequency of tone 2.
- **on\_time** - the duration of the tone when it is on. A -1 indicates a continuous tone.
- **off\_time** - the duration when no tone is played.

The IP Phone 1140E supports using WAV files to replace the ringtone Frequency/Cadence pattern. For a system-wide setting, the country default values can be used.

### NAT configuration commands

- **NAT\_SIGNALLING [NONE | SIP\_PING | STUN]** indicates the type of protocol used for NAT traversal in the signaling port. The IP Phone 1140E with SIP Firmware supports two methods of NAT traversal of the signaling path: SIP\_PING and STUN.
  - **NONE** - If the value is not set to None, this parameter overrides the value of the parameter SIP\_PING in the device configuration file.
  - **SIP\_PING** - a Nortel proprietary NAT traversal protocol. Note that SIP\_PING only supports NAT traversal in the signaling port.
  - **STUN** - the most common NAT traversal method.
- **NAT\_MEDIA [NONE | STUN]** indicates the type of protocol used for NAT traversal in the media ports. The default is NONE.
  - **NONE** - is the default and disables NAT\_MEDIA.
  - **STUN** - the most common NAT traversal protocol for the media (RTP and Real-time Control Protocol [RTCP]) port.
  - **x** - is the binding lifetime in seconds.

#### ATTENTION

**NAT\_TTL [x]** is used for future development. Currently, the default value is 2 minutes (120 seconds) and SIP IP Phones 1120E/1140E do not process or use the value defined in **NAT\_TTL [x]**. SIP IP Phones 1120E/1140E always ping the ports at regular intervals of 60 seconds regardless of the NAT\_TTL value.

- **STUN\_SERVER\_IP1[ip\_address]** NAT traversal using STUN protocol requires a STUN server in the public internet. Two STUN server IPs can be provisioned.
  - **ip\_address** - is the IP address of STUN server 1.
- **STUN\_SERVER\_IP2[ip\_address]** NAT traversal using STUN protocol requires a STUN server in the public internet. Two STUN servers IPs can be provisioned.
  - **ip\_address** - is the IP address of STUN server 2.
- **STUN\_SERVER\_PORT1[port\_number]** is the port number used corresponding to STUN\_SERVER\_IP1. The default port number is 3478.
  - **port\_number** - is the port number.
- **STUN\_SERVER\_PORT2[port\_number]** is the port number used corresponding to STUN\_SERVER\_IP2. The default port number is 3478.
  - **port\_number** - is the port number.

### VQMon configuration commands

- **VQMON\_PUBLISH [YES | NO]** is the command that is used to enable or disable the publish message containing the voice quality monitoring metrics sent to the Proactive Voice Quality Monitoring (PVQMoN) collecting server.
  - **YES** - enables VQMoN.
  - **NO** - disables VQMoN. NO is the default.
- **VQMON\_PUBLISH\_IP [xxx.xxx.xxx.xxx]** is used to set the IP address of the PVQMoN server that collects voice quality monitoring metrics from the publish message.
- **LISTENING\_R\_ENABLE [YES | NO]** is used to enable or disable the detection of the Listening R Value to measure voice quality based on burst packet loss, transmission delay, and burst loss frequency. LISTENING-R\_ENABLE is represented using a scale from 0 (lowest quality) to 100 (highest quality).
  - **YES** - enables the sending of the Listening R Value.
  - **NO** - disables the sending of the Listening R Value.
- **LISTENING\_R\_WARN [xx]** is a threshold to report a warning on the Listening R Value. The default value is vocoder-dependent and is 80.



- **xx** - a value between 1 and 100, used to signal the warning
- **LISTENING\_R\_EXCE [xx]** is the threshold to report an unacceptable Listening R Value. The default value is vocoder-dependent and is 60.
  - **xx** - a value between 1 and 100, used to signal the warning
- **PACKET\_LOSS\_ENABLE [YES | NO]** is a command that enables or disables packet loss detection. Packet loss is the fraction of RTP data packets from the source lost since the beginning of reception. The value is an integer scaled by 256. The range is 0 to 25600.
  - **YES** - enables packet loss detection
  - **NO** - disables packet loss detection
- **PACKET\_LOSS\_WARN [xx]** is the threshold to report a warning on Packet Loss. The default is 256 (1%).
  - **xx** - a value between 1 and 25600.
- **PACKET\_LOSS\_EXCE [xx]** is the threshold to report a warning on unacceptable Packet Loss. The default is 1280 (5%).
  - **xx** - a value between 1 and 25600.
- **JITTER\_ENABLE [YES | NO]** is used to enable or disable inter-arrival Jitter detection on incoming RTP packets inter-arrival time. The value is represented in 1/65536 of a second.
  - **YES** - enables jitter detection
  - **NO** - disables jitter detection
- **JITTER\_WARN [xx]** is the threshold to report a warning on Inter-arrival Jitter. The default is 3276 (50ms).
  - **xx** - any integer value that is 1/65536 of a second.
- **JITTER\_EXCE [xx]** is the threshold to report unacceptable Inter-arrival Jitter. The default is 32768 (500ms).
  - **xx** - any integer value that is 1/65536 of a second.
- **DELAY\_ENABLE [YES | NO]** is used to enable or disable Excessive Delay detection. This is the one-way delay (including system delay) for the call, measured in milliseconds.
  - **YES** - enables Excessive delay detection.
  - **NO** - disables Excessive delay detection.

- **DELAY\_WARN [xx]** is the threshold to give warning on Excessive Delay. The default is 150ms.
  - **xx** - any integer value that is 1/65536 of a second.
- **DELAY\_EXCE [xx]** is the threshold to report unacceptable Excessive Delay. The default is 175ms.
  - **xx** - any integer value that is 1/65536 of a second.
- **SESSION\_RPT\_EN [YES | NO]** is used to enable or disable periodic VQMon session reports. The default is disabled.
  - **YES** - enables periodic VQMon session reports.
  - **NO** - disables periodic VQMon session reports.
- **SESSION\_RPT\_INT [xx]** is used to specify the interval for the periodic VQMon session report in seconds. The default is 60 seconds.
  - **xx** - the value in seconds.

### System commands

- **ADMIN\_PASSWORD [password]** is used to change the default administrator password of the IP Phone 1140E that is used for unlocking network menus. The default is 26567\*738.
  - **password** - the administrator password.

## Create the Dialing Plan file on the provisioning server

A dialing plan essentially describes the number and pattern of digits that a user dials to reach a particular telephone number. Access codes, area codes, specialized codes, and combinations of the number of digits dialed are all part of a dialing plan.

The purpose of the dialing plan is so that the end user does not have to press the send or pound key (#) to have the IP Phone 1140E with SIP Firmware send the initial message to start the call.

Dialing a telephone number on an IP Phone that supports SIP can be different than dialing a number from a traditional telephone. SIP signaling is communicated through a SIP URI to get to the far end. For example, you can key in the SIP address, jsmith@yourcompany.com to reach John Smith. When the IP Phone 1140E with SIP Firmware receives this address, the dialing plan is bypassed and the IP Phone 1140E simply uses the SIP URI to send a SIP INVITE to jsmith@yourcompany.com (INVITE sip:jsmith@yourcompany.com).

Entering a SIP URI address, however, is inconvenient for an IP Phone with SIP Firmware unless a USB keyboard is attached. Also, the user must explicitly press the send key (or use some method to indicate the end of the URI) to indicate the completion of the SIP address. This is not something that the user is accustomed to in a traditional PBX environment.

The alternative is to use a URI where numbers are used to reach the far end. Using different access codes, the IP Phone with SIP Firmware translates the digits entered into something that the server can understand and remaps the number entered into different URIs. Some of the numbers are mapped as intercom calls, some numbers are mapped as local Public Switched Telephone Network (PSTN) calls, and some numbers are mapped as public long-distant calls.

The issue is that until the IP Phone itself can determine the type of call, no SIP INVITE message is sent. This is where the dialing plan comes into effect. The call type is determined by the dialing plan. Based on the rules defined in the dialing plan, once a match has been identified, the IP Phone 1140E with SIP Firmware sends the invite without the need to press the send key. This behavior closely matches the traditional PBX operation.

The IP Phone 1140E with SIP Firmware design places no restriction in the format of the SIP URI. The dialing plan is a scheme to match the user experience with traditional PBX operation. It does not restrict the type of URI that the user can use.

The IP Phone 1140E with SIP Firmware uses a dialing plan to recognize a call as an emergency call when it sends an INVITE. The dialing plan can have multiple emergency numbers. See the chapter "[Emergency 911 - Operator control of disconnect](#)" (page 99) for information on the handling of Emergency 911 calls by the IP Phone 1140E with SIP firmware.

The following is an example of a dialing plan.

**Figure 6**  
**Sample dialing plan**

```

/* ----- */
/* A simple dial plan */
/* ----- */
$N="yourcompany.com"
$t=300
$s=0

%%

/* DIGITMAP: Operator call */

(0)(0)#                && sip:$N;$N;user=phone    &&

/* DIGITMAP: Help Desk */

(411)(411)#            && sip:$N;$N;user=phone    &&

/* DIGITMAP: Emergency call */

(911)(911)#            && sip:$N;$N;user=phone    && t=100

/* DIGITMAP: Private intra-location call, no access code */

([0496]x{3})([0496]x{3})# && sip:$N;$N;user=phone    &&

/* DIGITMAP: Public local call, access code 9 */

(9[1]x{9})(9[1]x{9})#   && sip:$N;$N;user=phone    &&

/* DIGITMAP: Private Intra-company Call, access code 6 */

(6[10]x{6})(6[10]x{6})# && sip:$N;$N;user=phone    &&

/* DIGITMAP: Public national call, access code 61 */

(61x{10})(61x{10})#    && sip:$N;$N;user=phone    &&

/* DIGITMAP: Public international call, access code 6011 */

(6011x{7,15})(6011x{7,15})# && sip:$N;$N;user=phone    && t=8000

```

## Dialing function description

### Dialing plan

As most telephone users are used to dialing digits to indicate the address of the destination, there is a need to specify the rule by which digits are transformed into a URI. The IP Phone 1140E with SIP Firmware dialing plan contains two sections delimited by two percent signs (%%).

**Figure 7**  
**Sample dialing plan declarations section**

```
+-----+
| declarations section | user pre define variables and parameters |
| %%                  | section separator                               |
| digit maps          | list of digit maps                               |
+-----+
```

In the declaration section, the administrator can define the variables. The variables must start with a dollar (\$) sign, followed by a number or a character, such as \$1 or \$a. There are two variables that are reserved by system. They are as follows:

\$\$ : used for the collected digits if they match the pattern

\$t : default timer

There must be a domain name defined and the domain name can be represented by any variable. In [Figure 6 "Sample dialing plan" \(page 52\)](#), the domain name is represented by \$n.

The variable definitions take the form:

**Figure 8**  
**Sample dialing plan variable definitions**

```
+-----+
| Name = value        |
+-----+
```

For example:

\$1="nortel.com"

\$2="Nortel"

\$3="."

\$4="com"

\$5="Nortel.com"

\$t=10000 (default timer is 10 seconds)

```
$a=Nortel.com
```

The second section of dialing plan contains the digit map. The digit map section has three subsections that are divided by a separator of two ampersands (&&).

**Figure 9**  
**Sample dialing plan digit map section**

```
+-----+
| patterns && destination string && dialing action attributes |
+-----+
```

The first part of a dialing plan contains a pattern defined with DRegex, which is used for matching the dialed number. The patterns are separated by the pipe (|) sign. The second part contains the result string used in the dial step. The third part defines the parameters used by UA in dialing action.

The following parameter is currently defined:

t=xxxx: After this timer expires, the number entered is automatically dialed. The timer starts after the first digit is entered and after it expires, the collected digits are automatically dialed out. xxxx is a decimal number in msec. The default timer is used when t is not specified in the digit map.

For example:

```
X{4} && sip:$$; phone-context=nortel.com;user=phone && t=7000
```

When the user presses any 4 digits, such as 4567, the following SIP URIs are generated because of the translation rule:

Sip:4567; phone-context=nortel.com;user=phone. The timeout of stopping the collection of digits is 7 seconds.

The pound sign (#) at the end of the digit map causes the IP Phone 1140E to dial the matched dialing plan immediately.

### DRegex

The Digit Regular Expression (DRegex) syntax is a telephony-oriented mapping of Portable Operating System Interface (POSIX) Extended Regular Expressions (ERE). Users must take care not to confuse the DRegex syntax with POSI EREs as they are not identical. In particular, there are many

features of POSIX EREs that DRegex does not support. The dialing plan uses DRegex instead of ERE. The following rules demonstrate the use of DRegex.

**Figure 10**  
**DRegex rules**

Entity	Matches
character	digits 0-9, *, #, and A-D (case insensitive, A-D only for military requirements)
*	the * character
#	the # character
[character selector]	Any character in selector
[^digit selector]	Any digit (0-9) not in selector
[range1-range2]	Any character in range from range1 to range2, inclusive
x	Any digit 0-9
{m}	m repetitions of previous pattern
{m,}	m or more repetitions of previous pattern
{,n}	At most n (including zero) repetitions of previous pattern
{m,n}	at least m and at most n repetitions of previous pattern
()	provide "captures" for back reference variable \$\$
\$\$	back reference "matches" text previously matches within parentheses or the "matches" if parentheses is not specified
/* comments line */	comments

Example	Description
1	Matches the digit 1
[179]	Matches 1, 7, or 9
[2-9]	Matches 2, 3, 4, 5, 6, 7, 8, 9
[^15]	Matches 0, 2, 3, 4, 6, 7, 8, 9
[02-46-9A-D]	Matches 0, 2, 3, 4, 6, 7, 8, 9, A, B, C, D
x	Matches 0, 1, 2, 3, 4, 5, 6, 7, 8, 9
*6[179#]	Matches *61, *67, *69, or *6#
x{10}	Ten digits (0-9)
011x{7,15}	011 followed by seven to fifteen digits
91(x{10})	matches 91 followed by 10 digits (does not include 91)
	Ex: 911234567890
	\$\$=1234567890

## Downloadable WAV files

It is possible to customize the ring tones on the IP Phone 1140E with SIP Firmware. Up to five special ring tones can be downloaded from the provisioning server and stored on the IP Phone 1140E. The end user can select which ring tone they would like to implement.

In order to download these special files, the files must reside on the provisioning server and be specified in the SIP provisioning file. For more information, see ["Download the SIP Firmware to the provisioning server" \(page 26\)](#). The WAV files have a maximum size of 512 KB each for the IP Phone 1140E.

The file format is restricted to ITU-T A-law or u-law (8.0 kHz, 8-bit, mono or 16.0 kHz, 16 bit mono).

After the WAV files are downloaded to the IP Phone 1140E, the WAV file names appear in **Pref, Audio, Tones, Ring Pattern**(1 to 8 are standard ring tones, and 9 and above are WAV ring tones) and the WAV ring tones can then be selected to replace the standard ring tones.

For further information about downloadable WAV files, see the *SIP Firmware Release 1.1 for IP Phone 1140E User Guide* (NN43113-101).



## Configure the DHCP server

Use DHCP to provide partial Device Settings or full Device Settings, as well as to automatically provide Voice VLAN IDs.

**Table 7**  
**Characteristics of Partial DHCP mode and Full DHCP mode**

Partial DHCP mode	Partial DHCP mode retrieves the following network parameters from the DHCP server: IP address, subnet mask, and default gateway configuration for the IP Phone 1140E.
Full DHCP mode	As well as those parameters retrieved in Partial DHCP mode, Full DHCP also retrieves the following from the DHCP server: DNS server and Provisioning Server.
Auto VLAN Discovery	Auto VLAN Discovery retrieves the Voice VLAN ID for the IP Phone 1140E with SIP Firmware.

### Partial DHCP mode

After the IP Phone 1140E with SIP Firmware is configured to operate in Partial DHCP mode, the DHCP server does not need any special configuration to support an IP Phone 1140E with SIP Firmware. The IP Phone 1140E with SIP Firmware receives the following Device Settings parameters from the DHCP server in the following table:

**Table 8**  
**DHCP options in Partial DHCP mode**

Parameter requested by the IP Phone 1140E	Description	DHCP server option
Subnet mask	The subnet mask of the IP Phone 1140E.	1
Router and gateways	IP address of the default gateway of the IP Phone 1140E.	3

Lease time	Implementation varies according to DHCP server configuration.	51
Renewal time	Implementation varies according to DHCP server configuration.	58
Rebinding interval	Implementation varies according to DHCP server configuration.	59

Partial DHCP is the response from a DHCP server that is not configured to recognize the Nortel-specific Vendor Class Identifier in option 60 (Nortel-SIP-Phone-A). After the IP Phone 1140E is configured to operate in Partial DHCP mode, the DHCP server needs no special configuration to support an IP Phone 1140E. Using Partial DHCP, an IP Phone 1140E can obtain its IP address, subnet mask, and gateway IP address. The remainder of the configuration information is manually entered on the IP Phone 1140E. This includes the DNS server IP and the Provisioning server address and protocol.

## Full DHCP mode

The DHCP server requires special configuration in Full DHCP mode. The IP Phone 1140E with SIP Firmware obtains Device Settings parameters from specially configured DHCP servers.

The IP Phone 1140E with SIP Firmware requests the following Device Settings parameters from the DHCP server:

- IP address configuration for the IP Phone 1140E
- subnet mask for the IP Phone 1140E IP address
- default gateway for the IP Phone 1140E subnet
- DNS server
- Provisioning Server

It is also possible to obtain the DNS IP automatically using Full DHCP mode without any special configuration of the DHCP server. This means that there is no need to configure the Nortel-specific Vendor Class Identifier (Option 60) on the DHCP server. However, the provisioning server address needs to be manually defined within the Device Settings menu. This configuration requires toggling to Partial DHCP mode to define the provisioning server address and toggling back to Full DHCP mode after this is complete.

## Configure the DHCP server to support Full DHCP mode

### SIP IP Phone class identifier

A Nortel-SIP-Phone-aware DHCP server is needed for Full DHCP mode. For Full DHCP mode, the DHCP server requires special configuration.

After the DHCP server is configured to recognize the IP Phone 1140E with SIP Firmware as a unique IP Phone, the DHCP server can treat the IP Phone 1140E differently than other DHCP IP Phones. An IP Phone-aware DHCP server can automatically configure Nortel IP Phones by sending all information that the IP Phone requires.

The IP Phone 1140E and the DHCP server communicate using a unique class identifier. After the IP Phone 1140E first sends the DHCP DISCOVER, it includes the Nortel-SIP-Phone-A ASCII string within the Vendor Class Identifier (Option 60). The DHCP server recognizes this special Vendor Class Identifier (Option 60) and sends back OFFER, which also includes the same Vendor Class Identifier. This makes it possible to notify the IP Phone 1140E with SIP Firmware that the server is IP Phone-aware, and that it is safe to accept the offer from the server.

Every Nortel IP Phone 1140E with SIP Firmware fills in the Vendor Class ID option of the DHCPDISCOVER and DHCPREQUEST messages with the null-terminated, ASCII-encoded string Nortel-SIP-Phone-A, where A identifies the version number of the information format of the IP Phone.

The Class Identifier Nortel-SIP-Phone-A must be unique in the DHCP server domain.

The unique DHCP configuration is required to allow the DHCP server to respond with a unique Option 66 parameter to the IP Phone 1140E with SIP Firmware.

**Note:** The DHCP standard defines Option 66 as the bootp server address in a string. The meaning of the bootp server address is extended in Nortel IP Phone 1140E with SIP Firmware to include the provisioning server address. The string in the DHCP offer for Option 66 can be

- the numeric IP address or name of the TFTP server or the URI (if FTP or HTTP protocol is used) of the provisioning server in the form of

<protocol>://<provisioning server URL>

For example:

http://mydomain.com/SIP\_phone

If provisioning server authentication is required, the user credential must be embedded in the URI in the form of

```
<protocol>://[<userid>:<password>@]<provisioning server
URL>[:port][path]
```

For example,

```
ftp://www.mydomain.com/ABC or ftp://myuserid:mypass@ftp.mydo-
main.com:21/ABC
```

### Requested Device Settings parameters

Using Full DHCP mode, a SIP IP Phone-aware DHCP server can automatically configure Nortel SIP IP Phones by requesting a list of configuration parameters. The IP Phone 1140E uses DHCP to request and receive the information.

The following table lists the Device Settings parameters requested by the IP Phone 1140E in the Parameter Request List option (Option Code 55) in the DHCPDISCOVER and DHCPREQUEST messages. The DHCPOFFER and the DHCPACK reply messages from the DHCP server must contain the options in the following table.

**Table 9**  
**DHCP options in Full DHCP mode**

Parameter requested by the IP Phone 1140E	Description	DHCP server option
Subnet mask	This is the subnet mask of the IP Phone 1140E	1
Router and gateways	IP address of the default gateway of the IP Phone 1140E.	3
DNS server	DNS Server address; only the first one from the list is used.	6
Broadcast address	This is the Broadcast address of the subnet. The IP Phone 1140E automatically calculates the Broadcast address if it is not provided.	28
DNS domain	Implementation varies according to DHCP server.	15
Lease time	Implementation varies according to DHCP server.	51
Renewal time	Implementation varies according to DHCP server.	58

Rebinding interval	Implementation varies according to DHCP server.	59
Provisioning server	Used for delivering the provisioning server IP address. This parameter can contain either IP address or a URL to the provisioning server or folder.	66

## DHCP VLAN Auto Discovery

Configuring a server for Voice VLAN Discovery is optional. This configuration is done in addition to any configuration done for Full DHCP or Partial DHCP and it is required only when you are configuring the VLAN Auto Discovery in the Device Settings menu on the IP Phone 1140E.

Auto Voice VLAN Discovery is only possible in Full and Partial DHCP mode.

VLAN Auto Discovery configuration is useful in a network with separate Data VLAN for traffic (commonly used for PC-to-PC communication) and Voice VLAN for VoIP traffic with different priorities.

The VLAN Auto Discovery is a two-step process:

1. DISCOVER is sent to the DHCP server for available Voice VLAN IDs. The DHCP server sends an OFFER with the available Voice VLAN IDs. If the Data VLAN ID has been manually provisioned in the Device Settings of the IP Phone 1140E, DHCP DISCOVER is tagged with the Data VLAN ID; otherwise, it is untagged.
2. DISCOVER is sent to the DHCP server for all of the DHCP required parameters. However, this DISCOVER is tagged with the Voice VLAN obtained in step 1.

DHCP VLAN Auto Discovery requires a Nortel-SIP-Phone-aware DHCP server. All DHCP requests carry the Vendor Class Identifier, Nortel-SIP-Phone-A, to allow the DHCP server to identify that the requests are coming from an IP Phone 1140E with SIP Firmware.

DHCP Auto Discovery returns Voice VLAN IDs. The DHCP protocol provides no standard option for VLAN ID requests. Separate DHCP vendor-specific entry is needed for DHCP VLAN Auto Discovery to convey the VLAN information to the IP Phone. DHCP VLAN Auto Discovery uses one of the reserved for site-specific use DHCP options for VLAN list retrieval. At least one of the following Nortel site-specific options must be returned by the DHCP server as part of each DHCPOFFER and DHCPACK message for the IP Phone to accept these messages as valid; 43, 128, 131, 144, 157, 188, 191, 205, 219, 223, 232, 247, 251.

After multiple VLAN IDs are returned from the DHCP server, the IP Phone 1140E tries to connect to each of the VLANs, following the order in which VLAN IDs are specified in the DHCP option.

The format of the field for DHCP VLAN Auto Discovery is: Type, length, and data, described in the following sections.

### **Type (1 octet)**

To avoid the possibility of option types already being used by different vendors, there are fourteen options types supported by the telephone. They are: 128, 131, 144, 157, 188, 191, 205, 219, 223, 232, 247, 251, 247, and 251. Select one value from the type byte list for the DHCPOFFER response. Nortel recommends using 232, 247, or 251. DHCP option numbers less than 224 are reclaimed by the IETF (RFC 3942). Future changes in the DHCP protocol can force the telephone to stop sending these option requests. Currently, IP Phone 1140E with SIP Firmware does support the remaining listed options to maintain backward compatibility.

### **Length (1 octet)**

The Length value is variable. Count only the number of octets in the data field.

### **Data (variable number of octets)**

ASCII based format: VLAN-A:XXX+YYY+ZZZ. where, VLAN– A: uniquely identifies this as the Nortel DHCP VLAN discovery request. Each VLAN ID is followed by a plus (+) sign if there are more VLAN IDs or a period (.) to terminate the string.

There are a maximum of 10 VLAN IDs that can be configured in the current version.

Once IP Phone 1140E with SIP Firmware receives the DHCP offer containing the site-specific Voice VLAN option, the next DHCPDISCOVERY message is tagged with the Voice VLAN ID.

---

## Physically install the IP Phone 1140E

---

Complete instructions to physically install the IP Phone 1140E, including detailed figures and applicable warnings, are given in the document *SIP Firmware Release 1.1 for IP Phone 1140E User Guide* (NN43113-101).

The steps for installing the IP Phone 1140E are summarized in the following procedure.

### Procedure 4

#### Installing the IP Phone 1140E

Step	Action
1	Remove the stand cover. Pull upward on the center catch and remove the stand cover. The cable routing tracks are now accessible.
2	Connect the AC power adapter (optional). Connect the adapter to the AC adapter jack in the bottom of the IP Phone 1140E. Form a small bend in the cable, and then thread the adapter cord through the channels in the stand.
3	Install the handset. Connect the end of the handset cable with the short straight section into the handset. Connect the end of the handset cable with the long straight section to the back of the IP Phone 1140E, using the RJ-9 handset jack. Form a small bend in the cable, and then thread the handset cord through the channels in the stand so that it exits behind the handset on the right side, in the handset cord exit in the stand base.
4	Install the headset (optional). If installing a headset, plug the connector into the RJ-9 headset jack on the back of the IP Phone 1140E, and thread the headset cord along with the handset cord through the channels in the stand, so that the headset cord exits the channel.
5	Install the Ethernet cable. Connect one end of the supplied Ethernet cable to the back of the IP Phone 1140E using the RJ-45 connector and thread the network cable through the channel.

- 6 Install the Ethernet cable connecting the PC to the IP Phone 1140E (optional). If connecting PC Ethernet through the IP Phone 1140E, connect one end of the PC Ethernet cable to the IP Phone 1140E using the RJ-45 connector and thread it through the channel. Connect the other end to the LAN connector on the back of the PC.
- 7 Install additional cables. If applicable, plug in optional USB devices. Connect the Ethernet cable to the LAN Ethernet connection. If using an AC power adapter, plug the adapter into an AC outlet.
- 8 Wall-mount the IP Phone 1140E (optional). The IP Phone 1140E can be mounted either by: (method A) using the mounting holes on the bottom of the IP Phone 1140E stand, or (method B) using a traditional-style wall-mount box with RJ-45 connector and 15-cm (6-inch) RJ-45 cord (not provided).
- 9 Replace the stand cover. Ensure that all cables are neatly routed and press the stand cover into place until a click is heard.
- 10 Put the IP Phone 1140E in the wall-mount position (optional). If the IP Phone 1140E is to be mounted on the wall, put it in the wall-mount position by holding the tilt lever and pressing the IP Phone 1140E towards the base until the IP Phone 1140E is parallel with the base. Release the tilt lever and continue to push the IP Phone 1140E towards the base until an audible click is heard. Ensure the IP Phone 1140E is securely locked in position.

---


—End—

---



The following figure shows the connections on the IP Phone 1140E.

**Figure 11**  
**IP Phone 1140E connections**

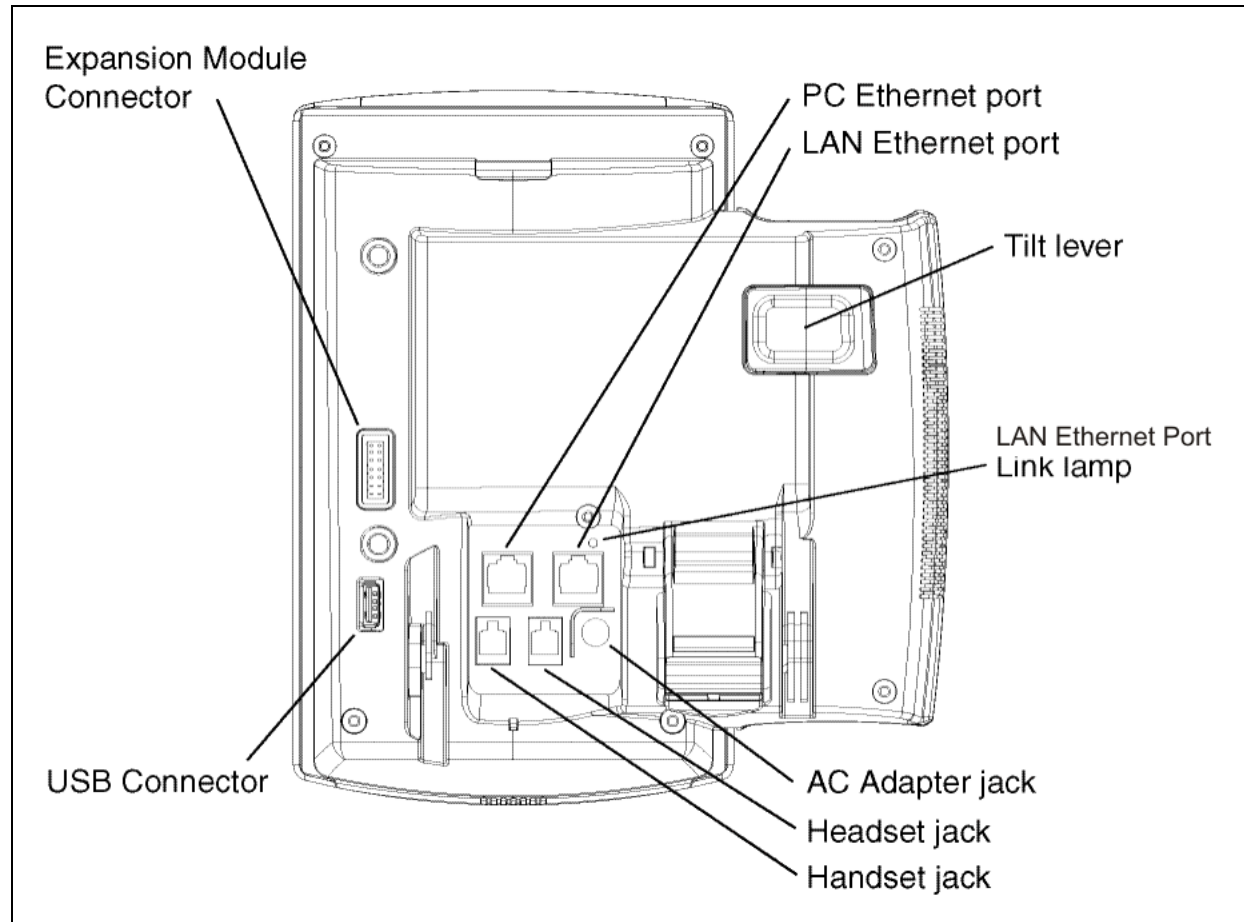



# Upgrade and convert the IP Phone 1140E firmware

## Introduction

This chapter describes how to upgrade an IP Phone 1140E with UNISim firmware to SIP firmware.

In order to upgrade an IP Phone 1140E with UNISim firmware, first determine if you have the minimum UNISim firmware release on the IP Phone (0625C1H). If your IP Phone 1140E is installed with the minimum version of UNISim firmware, proceed to the section "[Convert UNISim Firmware to SIP Firmware on the IP Phone 1140E](#)" (page 75). If your IP Phone 1140E is not installed with the minimum version of UNISim firmware, proceed to the section "[Upgrade to the minimum UNISim Firmware](#)" (page 69).

To convert the firmware on the IP Phone 1140E from SIP to UNISim, see the section "[Maintenance and troubleshooting](#)" (page 123).

## Upgrade the SIP Firmware on the IP Phone 1140E

Use the following procedures to upgrade existing SIP Firmware to new SIP Firmware on the IP Phone 1140E.

### Download the SIP Firmware to the provisioning server

To download the SIP Firmware, follow the steps in the next procedure.

#### Procedure 5

#### Downloading SIP Firmware for the IP Phone 1140E from the Nortel Web site

Step	Action
1	Go to <a href="http://www.nortel.com/support">www.nortel.com/support</a> .
2	Log on to the Nortel Web site with a valid Nortel User ID and Password.  The <b>Technical Support</b> page appears.

- 3 Enter IP Phone 1140E in the **Knowledge and Solution Engine** box.
- 4 Select **Software** in the **All types** scroll down menu.
- 5 Press the gray arrow at the end of the **Knowledge and Solution Engine** box to obtain the **Search Results**.
- 6 From the **Search Results**, select the appropriate version of the SIP Firmware for the IP Phone 1140E, for example, **SIP IP Phone 1140E Release 0625C1HD26.bin**.
- 7 Place the selected firmware on the provisioning server.

---

—End—

---

### Modify the SIP provisioning file

Use the following procedure to modify the SIP provisioning file, which exists on the provisioning server.

#### Procedure 6

#### Modifying the SIP provisioning file

Step	Action
1	Under the firmware [FW] section of the SIP Provisioning file, increase the VERSION number (for example 06A5C1Hd26).
2	Under the firmware [FW] section of the SIP Provisioning file, modify the FILENAME of the new file you want to upload to the IP Phone 1140E.
3	<p>Invoke the upgrade mechanism.</p> <p>Use one of the next three methods to invoke a firmware upgrade on the IP Phone 1140E with SIP Firmware.</p> <ol style="list-style-type: none"> <li>1. Power off and power on the IP Phone 1140E.</li> <li>2. Select <b>Services, System, Check For Updates</b> on the IP Phone 1140E.</li> <li>3. Allow for an automatic check for updates to occur. (See <a href="#">AUTO_UPDATE</a> under "<a href="#">Feature configuration commands</a>" (page 36)).</li> </ol>

Any of these actions causes the IP Phone 1140E to contact the provisioning server and attempt to read the Provisioning file. A Soft Reset (**Srvcs, System, Reset Phone**) does not cause the IP Phone 1140E to retrieve the Provisioning file and hence does not cause a firmware upgrade.

---

—End—

---

## Upgrade to the minimum UNISTim Firmware

The IP Phone 1140E can be ordered with UNISTim Firmware installed or with SIP Firmware installed. You can convert the firmware on an IP Phone 1140E from UNISTim to SIP. To successfully convert the firmware from UNISTim to SIP, the UNISTim Firmware version on your IP Phone 1140E must be 0625C1H or higher.

### Identify the current version of UNISTim Firmware

For a new IP Phone 1140E, follow [Procedure 7 "Checking the UNISTim Firmware version on a new IP Phone 1140E" \(page 69\)](#) to determine the version number of the UNISTim Firmware on an IP Phone 1140E.

For an IP Phone 1140E already in use, follow [Procedure 8 "Checking the UNISTim Firmware version on an IP Phone 1140E already in use" \(page 70\)](#) to determine the version number of UNISTim Firmware on an IP Phone 1140E.

#### Procedure 7

##### Checking the UNISTim Firmware version on a new IP Phone 1140E

Step	Action
1	<p>After assembling the IP Phone 1140E and turning it on, the display on the IP Phone 1140E goes through the following sequence:</p> <ul style="list-style-type: none"> <li>• Nortel splash screen appears</li> <li>• Nortel sonic sound plays</li> <li>• Nortel banner appears</li> </ul> <p>Following the Nortel banner, the firmware version appears in the display (<b>F/W version</b>).</p>
2	<p>Note the UNISTim Firmware version number and write it down. Compare the version number to the minimum-required UNISTim Firmware version (0625C1H).</p> <p>UNISTim Firmware version names contain numbers and letters. Use the last three characters in a version to compare the version of UNISTim on an IP Phone 1140E (0625<b>C1H</b>) with the minimum required version for the upgrade. Note that C23 is greater than <b>C1H</b> and C1B is less than <b>C1H</b>.</p>

If the version number is equal to or higher than 0625C1H, go to the section "[Convert UNISTim Firmware to SIP Firmware on the IP Phone 1140E](#)" (page 75).

If the number is lower than 0625C1H, go to the section "[Upgrade UNISTim Firmware to the minimum required UNISTim Firmware](#)" (page 72) and follow the instructions to upgrade an IP Phone 1140E to the minimum-required version of UNISTim Firmware before a conversion to SIP Firmware.

—End—

#### Procedure 8

#### Checking the UNISTim Firmware version on an IP Phone 1140E already in use

Step	Action
------	--------

- |   |  |
|---|--|
| 1 | Press the <b>Globe/Services</b> key on the IP Phone 1140E twice quickly. |
|---|--|



If the admin password prompt appears, enter the password **26567\*738**.

The Local Tools menu appears:

**Table 10**  
**Local Tools menu**

- |                          |
|--------------------------|
| 1. Preferences           |
| 2. Local Diagnostics     |
| 3. Network Configuration |
| 4. Lock Menu             |

To make a selection, press the number associated with the menu item, or use the **Navigation key cluster**.




to scroll through the menu items. Press the **Select** key to select the highlighted menu item.

**Table 11**  
**Using the Navigation key cluster to navigate in the Local Tools menu**

Key	Action
Down	Moves highlight down
Up	Moves highlight up
Right	Selected current menu item
Left	Closes menu
<b>Select</b> key (center of cluster)	Selects current menu item

 To close this menu, use the **Quit** key.

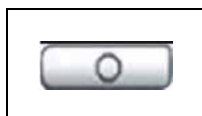

- 2 Select **2. Local Diagnostics** in the Local Tools menu by pressing the **Select** key in the Navigation key cluster or by pressing the number **2**.
- 3 Select **IP Set and DHCP Information** by pressing the **Select** key in the Navigation key cluster or by pressing the number **2**.
- 4 Use the down arrow in the Navigation key cluster to scroll down the menu to **Firmware Version**.
- 5 Note the UNISlim Firmware version number and write it down.  
 Compare the version number to the minimum-required UNISlim Firmware version (0625C1H).  
 UNISlim Firmware version names contain numbers and letters. Use the last three characters in a version to compare the version of UNISlim on an IP Phone 1140E (0625**C1H**) with the minimum required version for the upgrade. Note that C23 is greater than **C1H** and C1B is less than **C1H**.

---

—End—

---

If the version number is equal to or higher than 0625C1H, go to the section ["Convert UNISlim Firmware to SIP Firmware on the IP Phone 1140E"](#) (page 75).

If the number is lower than 0625C1H, go to the section "[Upgrade UNISTim Firmware to the minimum required UNISTim Firmware](#)" (page 72) and follow the instructions to upgrade an IP Phone 1140E to the minimum-required version of UNISTim Firmware before you convert to SIP Firmware.

### Upgrade UNISTim Firmware to the minimum required UNISTim Firmware

Use either of the following two methods to upgrade UNISTim Firmware.

1. UFTP download initiated by the server if the server supports this method of upgrading UNISTim Firmware. Refer to the appropriate documentation for your call server for instructions on using this method.
2. TFTP download on bootup.

If necessary, use the following procedure to configure the TFTP server.

#### Procedure 9

##### Configuring the TFTP server

Step	Action
1	The IP Phone 1140E always executes the TFTP download at bootup if a TFTP IP address is configured on the IP Phone 1140E after being initiated by the telephony call server.
2	Go to the TFTP server and create the 1140e.cfg provisioning file. The 1140e.cfg provisioning file is a clear text file. Create the provisioning file as shown in the next table.



**Table 12**

**Sample 1140e.cfg provisioning file**

```
[FW]
DOWNLOAD_MODE FORCED
VERSION 0625C23
FILENAME 0625C23.bin
```

This configuration file forces the firmware download of 0625C23.bin.

- 3 Download and copy the firmware to the TFTP server directory.  
To download the UNISTim Firmware for the IP Phone 1140E from the Nortel Web site:
  1. Go to [www.nortel.com/support](http://www.nortel.com/support).
  2. Log on to the Nortel Web site with a valid Nortel User ID and Password.



The **Technical Support** page appears.

3. Enter IP Phone 1140E in the **Knowledge and Solution Engine** box.
  4. Select **SOFTWARE** in the **ALL TYPES** scroll down menu.
  5. Press the gray arrow at the end of the **Knowledge and Solution Engine** box to obtain the **Search Results**.
  6. From the **Search Results**, select the appropriate version of the UNISTim Firmware for the IP Phone 1140E, for example, **IP Phone 1140E Release 0625C23**
  7. Place the selected firmware in the correct directory on the provisioning server.
- 4 In the IP Phone 1140E **Network Configuration** menu, change the **TFTP server address** and enter the correct TFTP server address.
- This can be the provisioning server as defined in the chapter ["Configure the provisioning server" \(page 25\)](#).
- 5 Select the **Apply&Reset** Context-sensitive soft key to save the settings and reset the IP Phone 1140E.

The IP Phone 1140E downloads the firmware file. The display shows **[FW] reading...**

If the download is successful, the display shows **[FW] writing...** and the blue LED flashes.

After the firmware image is downloaded to the IP Phone 1140E, the display shows **[FW] finished...**, the blue LED stops flashing, and the IP Phone 1140E resets.

The IP Phone 1140E registers to the TPS with the new firmware version.

If the upgrade is unsuccessful, see the chapter ["Maintenance and troubleshooting" \(page 123\)](#) in the section **Download failures**.

---

—End—

---

Follow the next procedure to download the minimum required version of UNISTim Firmware automatically through TFTP on bootup.

**Procedure 10****Downloading UNISlim Firmware automatically through TFTP on bootup****Step Action**

- 1 Press the **Globe/Services** key on the IP Phone 1140E twice quickly.  
If the admin password prompt appears, enter the password **26567\*738**  
The Local Tools menu appears:

**Table 13**  
**Local Tools menu**

- |  |
|--|
| <ol style="list-style-type: none"> <li>1. Preferences</li> <li>2. Local Diagnostics</li> <li>3. Device Settings</li> <li>4. Lock Menu</li> </ol> |
|--|

- 2 Select **3. Device Settings** from the **Local Tools** menu.  
The **Device Settings** screen appears.
- 3 If you are using DHCP, select Full or Partial. If you are manually configuring the IP address, netmask, and gateway address, select No.
- 4 If the DHCP option is set to Full or Partial, the IP address is automatically obtained.
- 5 Configure the TFTP IP address within the IP Phone 1140E Device Settings menu.  
  
This can be the provisioning server as defined in the chapter ["Configure the provisioning server" \(page 25\)](#).
- 6 Select the **Apply&Reset** Context-sensitive soft key to save the settings and reset the IP Phone 1140E.  
  
The IP Phone 1140E downloads the firmware file. The display shows **[FW] reading...**  
  
If the download is successful, the display shows **[FW] writing...** and the blue LED flashes.  
  
After the firmware image is downloaded to the IP Phone 1140E, the display shows **[FW] finished...** the blue LED stops flashing, and the IP Phone 1140E resets.

If the upgrade is unsuccessful, see the chapter "[Maintenance and troubleshooting](#)" (page 123) in the section **Download failures**.

—End—

## Convert UNISTim Firmware to SIP Firmware on the IP Phone 1140E

The IP Phone 1140E can be ordered with UNISTim Firmware installed or with SIP Firmware installed. If an IP Phone 1140E is installed with UNISTim Firmware, it runs with SIP Firmware only if the firmware is converted from UNISTim to SIP. If the procedure to determine the UNISTim version number is complete, and, if necessary, the procedure to upgrade the UNISTim Firmware is complete, an IP Phone 1140E can be converted from UNISTim Firmware to SIP Firmware.

Compare the version number to the minimum required UNISTim Firmware version (0625C1H).

UNISTim Firmware version names contain numbers and letters. Use the last three characters in a version to compare the version of UNISTim on an IP Phone 1140E (0625**C1H**) with the minimum required version for the upgrade. Note that C23 is greater than **C1H** and C1B is less than **C1H**.

The conversion must be performed using TFTP.



### WARNING

The TFTP download and upgrade of the Flash memory on the IP Phone 1140E may take a significant amount of time (possibly up to 10 minutes). Do not unplug or reboot the IP Phone 1140E during the process.

The next procedure explains how to download the SIP Firmware from the Nortel Web site.

### Procedure 11

#### Downloading SIP Firmware for the IP Phone 1140E from the Nortel Web site

Step	Action
1	Go to <a href="http://www.nortel.com/support">www.nortel.com/support</a> .
2	Log on to the Nortel Web site with a valid Nortel User ID and Password.  The <b>Technical Support</b> page appears.
3	Enter IP Phone 1140E in the <b>Knowledge and Solution Engine</b> box.
4	Select <b>SOFTWARE</b> in the <b>ALL TYPES</b> scroll down menu.

- 5 Press the gray arrow at the end of the **Knowledge and Solution Engine** box to obtain the **Search Results**.
- 6 From the **Search Results**, select the appropriate version of the SIP Firmware for the IP Phone 1140E, for example, **IP Phone 1140E Release 0625C1HD26.bin**.
- 7 Place the selected firmware on the provisioning server.

---

—End—

---

Follow the next procedure to convert the UNISTim Firmware to SIP Firmware on the IP Phone 1140E.

#### Procedure 12

#### Converting UNISTim Firmware to SIP Firmware using TFTP

Step	Action
1	Run the TFTP server (for example Tftpd32.exe).
2	Place firmware and configuration files in the folder of the TFTP server (for example 1140e.img F/W file and 1140e.cfg file) that contains the following lines:

**Table 14**  
**Sample 1140e.cfg configuration file**

[FW] DOWNLOAD_MODE AUTO VERSION 06C25D26.bin FILENAME 1140e.img
--

- 3 Configure the IP Phone 1140E Device Settings TFTP IP address to the IP address where your TFTP server is running.  
  
After you are finished the configuration, the IP Phone reboots and sends a request to the TFTP server.
- 4 Select the **Apply&Reset** Context-sensitive soft key to save the settings and reset the IP Phone 1140E.  
  
The following messages display on the IP Phone 1140E as the IP Phone 1140E cycles through the conversion process, one after the other:
  1. [FW] Reading...
  2. [FW] Writing...

### 3. [FW] Finished...

The IP Phone 1140E then boots up with SIP Firmware.

If the conversion is unsuccessful, see the chapter "[Maintenance and troubleshooting](#)" (page 123).

- |  |
|--|
| 1. TFTP file transfer takes approximately 15 seconds.  |
| 2. File writing takes 2.5 minutes. The IP Phone 1140E displays the message <b>[FW] writing...</b> and the blue <b>Data Waiting</b> LED flashes.  |
| 3. After the new SIP Firmware writing is finished, the blue LED stops flashing and the telephone displays <b>[FW] finished</b> and then reboots. |
| 4. The first time the SIP Firmware boots, the SIP Firmware performs a Flash File System conversion that takes 2.5 minutes.                       |

---

—End—

---



---

# Voice Quality Monitoring

---

## Feature overview

Proactive Voice Quality Monitoring (PVQMon or VQMon) allows the IP Phone 1140E with SIP Firmware to report voice quality statistics to a server in the network. The IP Phone 1140E with SIP Firmware collects various voice quality statistics, for example, packet loss, and sends the voice quality statistics to the server at regular intervals during a call. A subset of these statistics is also available for the user to view on the IP Phone 1140E by selecting the **Audio softkey** and then the **Monitor Audio Quality menu item**.

## VQMon set-up

Configure the following parameters on the IP Phone 1140E with SIP Firmware to connect to the server and send the PVQMon statistics.

1. Enable the feature. To enable the feature, configure the VQMON\_PUBLISH parameter in the device configuration file (see VQMon configuration commands).
2. Configure the IP address of the PVQMon server. Configure the IP address of the PVQMon server in either of the following settings:
  - a. Set VQMON\_PUBLISH\_IP through the device configuration file (see VQMon configuration commands).
  - b. Set PVQMon IP in Device Settings (see [Table 37 "PVQMon IP configuration" \(page 94\)](#))
3. Configure the remainder of the VQMon parameters in the device configuration file (see VQMon configuration commands). These parameters provide threshold information to the IP Phone 1140E with SIP Firmware. A report is sent to the server when these thresholds are exceeded.

## Server set-up

The IP Phone 1140E with SIP Firmware works with Telchemy server software. The name of the software is SQmediator and is available through Telchemy ([www.telchemy.com](http://www.telchemy.com)). The minimum version required is release 1.0.

## How VQMon works

When the IP Phone 1140E detects that a particular voice quality metric has exceeded a threshold (defined in the device configuration file), the IP Phone sends a message to the server indicating that there is an issue. If the issue persists then the IP Phone reports another message indicating that there is an exceeded value at regular intervals. This happens continuously until the voice quality metric falls below the threshold value. As well, the IP Phone can send regular reports of the voice quality at time intervals defined in the device configuration file.



---

## Device Settings on the IP Phone 1140E with SIP Firmware

---

### ATTENTION

An IP Phone 1140E with SIP Firmware displays different menus than the menus displayed on an IP Phone 1140E with UNISlim Firmware.

### Introduction

This chapter details how to configure the **Device Settings** parameters on the IP Phone 1140E with SIP Firmware. This includes items such as the IP address, the subnet mask, and the gateway IP address of the IP Phone 1140E.

The **Device Settings** parameters are listed in the following table in the order they appear on the **Device Settings** menu of the IP Phone 1140E with SIP Firmware. Read the section at the end of this chapter that explains how to provision the **Device Settings** parameters. If you are familiar with the **Device Settings** parameters, skip the last section in the chapter and proceed to the provisioning instructions.

**Table 15**  
**Parameters in Device Settings menu**

Enable 802.1x (EAP)
Device ID
Password
DHCP
SET IP
Net Mask
Gateway
DNS IP
Voice VLAN
VLAN Filter

Disable PC Port
Data VLAN
PC-Port Untag all
Duplex
Ignore GARP
Provisioning
Server URL
Protocol
Device ID
Password
PVQMon IP
NAT Traversal
NAT Signal
NAT Media
NAT TTL
STUN S1 IP
STUN S2 IP

### 802.1x (EAP) Port-based network access control

Extensible Authentication Protocol (EAP) supports multiple authentication methods and represents a technology framework that facilitates the adoption of Authentication, Authorization, and Accounting (AAA) schemes, such as Remote Authentication Dial In User Service (RADIUS). RADIUS is defined in RFC 2865. The IP Phone 1140E with SIP Firmware supports only the MD5 authentication method.

802.1x defines the following three roles:

1. Supplicant—an IP Phone that requires access to the network to use network services.
2. Authenticator—the network entry point to which the supplicant physically connects (typically a Layer 2/3 switch). The authenticator acts as the proxy between the supplicant and the authentication server. The authenticator controls access to the network based on the authentication status of the supplicant.
3. Authentication server—performs authentication of the supplicant.

Enable and disable Network-level authentication through the EAP configuration menu.

**Authorization**

If 802.1x is configured and the IP Phone 1140E is physically connected to the network, the IP Phone 1140E (supplicant) initiates 802.1x authentication by contacting the Layer 2/3 switch (authenticator). The IP Phone 1140E also initiates 802.1x authentication after the Ethernet connection (network interface only) is restored following a network link failure.

However, if the IP Phone 1140E resets, it assumes the Layer 2 link has remained in service and is authenticated.

The IP Phone 1140E fails to authorize if the DeviceID and the IP Phone 1140E passwords do not match the DeviceID and IP Phone 1140E passwords provisioned on the RADIUS Server. The Layer 2 switch (authenticator) locks out the IP Phone 1140E and network access is denied. If this happens during reauthorization, all telephone services are lost. The connected PC operates as normal.

**Device ID**

The Device ID is for use with the 802.1x (EAP) protocol. If the 802.1x (EAP) is not used, then there is no prompt to enter the Device ID.

**Password**

The Password is for use with the 802.1x (EAP) protocol. If the 802.1x (EAP) is not used, there is no prompt to enter the Password.

**DHCP**

There are three methods of provisioning DHCP.

1. **No DHCP (Manual configuration):** All the Device Settings parameters are configured manually on the IP Phone 1140E with SIP Firmware.
2. **Partial DHCP:** The IP Phone 1140E with SIP Firmware is configured to get a standard set of Device Settings parameters from the DHCP server.
3. **Full DHCP:** The IP Phone 1140E with SIP Firmware is configured to get as many Device Settings parameters as possible from the DHCP server.

**NO DHCP mode**

No DHCP mode is also known as Manual Device Settings. In this mode, the IP Phone 1140E does not need a DHCP server because no DHCP requests are sent during startup. All necessary parameters must be configured manually or through the device configuration file.

The minimum following parameters must be configured to achieve normal operation:

- SET IP
- Net Mask

- Gateway
- DNS IP
- Provisioning server IP, protocol, and, if user authentication is required to access the provisioning server, the user credentials

Note: TFTP protocol does not require user authentication. Device ID and password are ignored. FTP protocol requires user authentication and the default Device ID is anonymous with no password.

HTTP protocol can operate with or without user authentication. If no authentication is required, make sure to clear the Device ID and password fields in the configuration dialogue.

### SET IP

Select SET IP in the Device Settings menu to configure the IP address.

### Net Mask

Enter a subnet mask in the Net Mask field.

### Gateway

Enter an IP address of the local gateway in the Gateway field.

### DNS IP

Configure the Domain Name Server (DNS) IP.

### Voice VLAN

Configure the Voice VLAN.

**Table 16**  
**Telephony Port (incoming)**

Voice VLAN Setting	Result
No (default setting)	All telephony traffic that is transmitted on the telephony port is forwarded untagged
Auto (Not available if DHCP is set to No)	Enable Automatic VLAN Discovery for Voice VLAN. Initial DHCP request is forwarded based on the Data VLAN policy (for example, untagged if Data VLAN is disabled, or tagged with the Data VLAN ID if Data VLAN is enabled) to obtain Voice VLAN IDs. Subsequent DHCP requests using the acquired Voice VLAN IDs and the resolution of a Voice VLAN determine the final Voice VLAN ID used for signaling and the media traffic on the telephony port. Note: This means that if a Data VLAN ID is configured in the IP Phone 1140E and the Voice VLAN is set to Auto (Automatic Voice VLAN Discovery), the DHCP server to provide Voice VLAN information must

	be on the Data VLAN. If the DHCP server is not on the Data VLAN, the IP Phone 1140E fails to receive the DHCP information and fails to register. In addition, another DHCP server must reside in the Voice VLAN to provide the network parameters required. For more information, see the section on DHCP Auto VLAN Discovery.
4095	All telephony traffic that is transmitted on the telephony port has an 802.1q header appended and its Voice VLAN ID is set to the value manually configured here. Place the cursor over the 4095 and press the enter NAV key to modify this value to the desired Voice VLAN tag. Note that the value 4095 is not a valid VLAN ID. This is intentional to ensure a proper VLAN ID is entered.

### VLAN Filter

Configure the VLAN Filter (not available if Voice VLAN is set to No).

**Table 17**  
**VLAN Filter**

VLAN Filter Setting	Result
Enabled (box is checked)	Traffic is forwarded to the IP Phone 1140E port, based on a review of the MAC address of the packet as well as the 802.1q tag value. Traffic is forwarded through the IP Phone 1140E port, (to the network stack of the telephone), only if the packet matches the MAC address of the IP Phone 1140E and contains the Voice VLAN tag. If the Automatic VLAN Discovery feature is used, the filter is adjusted dynamically as the IP Phone 1140E validates the VLAN suggested by DHCP.
Disabled	The VLAN filter is disabled by default. If the VLAN filter is disabled, traffic is forwarded to the IP Phone 1140E port based only on a review of the MAC address of the packet. The IP Phone 1140E accepts traffic addressed to the MAC address of the IP Phone 1140E as well as any broadcast or multicast packets from any VLAN.

### Disable PC Port

With a disabled PC Port, the IP Phone 1140E with SIP Firmware does not receive or send packets to or from the PC port. No device can use the PC port to connect to the network.

**Data VLAN**

Configure the Data VLAN (the VLAN applicable to the PC port). The behavior of the PC port is summarized in the following table.

**Table 18**  
**PC Port (incoming traffic from PC)**

Data VLAN	Result
No	All traffic received on the PC port is forwarded based on the MAC address. The packets are not modified in any way.
4095 (Note that the value 4095 is not a valid VLAN ID. This is intentional to ensure a proper VLAN ID is entered.)	All untagged packets received from the PC have an 802.1q header appended and the VLAN ID is set to the value that is manually provisioned in this field. Any packet arriving on the PC port that is already tagged with matching VLAN ID is forwarded as is. Packets tagged with different VLAN IDs are dropped.

**Table 19**  
**PC Port (outgoing)**

Data VLAN	Result
No	All traffic received on the network port and telephony port is forwarded to the PC port based on MAC address only. The packets are not modified in any way.
4095 (Note that the value 4095 is not a valid VLAN ID. This is intentional to ensure a proper VLAN ID is entered.)	Traffic is forwarded to the PC port based on a review of the MAC address of the packet, as well as the value configured in the Data VLAN field. Traffic is forwarded out the PC port (to the PC) only if the packets contain the Data VLAN tag. Untagged traffic and traffic with a VLAN tag other than the Data VLAN are dropped.

**PC-Port Untag all**

Configure PC-Port Untag-All, which configures PC-Port VLAN Tag Stripping.

When enabled, all outgoing traffic to the PC has the VLAN tag removed. When disabled, packets are sent to the PC as is if Data VLAN is set to No or if Data VLAN is enabled and the VLAN tag matched. Packets with different VLAN ID are discarded.

## Duplex

In the Network menu, Auto Negotiation mode is the default setting for initial startup. Typically, the IP Phone 1140E is connected to a network that supports Auto Negotiation, and the IP Phone 1140E selects the best speed and duplex mode available. There is no intervention required under normal operation.

### ATTENTION

Nortel recommends that Auto Negotiation mode is used on the network and the IP Phone 1140E. Use Full Duplex mode only when the entire network is running in Full Duplex mode. Otherwise, a duplex mismatch results.

**Note:** Changing the speed, or the duplex mode, or both on the IP Phone 1140E changes both the LAN Ethernet port and PC Ethernet Port interfaces.

If the IP Phone is connected to a network configured for Full Duplex mode only, the IP Phone 1140E cannot automatically negotiate the proper configuration. Therefore, in this instance, to allow the IP Phone 1140E to work at the optimum speed and duplex mode, Full Duplex mode must be enabled.

## Ignore GARP

Gratuitous Address Resolution Protocol (GARP) Protection prevents the IP Phone 1140E with SIP Firmware from GARP spoof attacks on the network.

The IP Phone 1140E with SIP Firmware provides the ability to ignore GARP messages.

## Provisioning

The next four menu items apply to configuring the provisioning parameters.

**Server URL** Enter the numeric IP address, name, or URL of the provisioning server in the Server URL box.

**Protocol** Select the protocol used to access the provisioning server, either TFTP, FTP, or HTTP.

**Device ID** Enter the Device ID (User ID) used by the provisioning server for authentication of the IP Phone 1140E with SIP Firmware.

**Password** Enter the password used by the provisioning server for authentication of the IP Phone 1140E with SIP Firmware.

### **PVQMon IP**

If the Proactive Voice Quality Monitor (PVQMon) server is available on the network, enter the PVQMon IP address.

### **NAT Traversal**

The next five menu items apply to configuring the NAT Traversal Method if the IP Phone 1140E with SIP Firmware is connected to the network through a Network Address Translation device or a firewall.

**NAT Signal** The IP Phone 1140E with SIP Firmware supports two methods of NAT traversal of signaling path: SIP\_PING and STUN.

The default NAT traversal method is None.

SIP\_PING is a legacy Nortel Proprietary protocol for NAT Traversal for SIP signaling only. STUN is an Internet standard for NAT traversal.

If the value for NAT traversal is not set to None, this parameter overrides the value of the parameter SIP\_PING specified by the device configuration file for NAT\_SIGNALLING.

If the value for NAT traversal is set to None, the value of SIP\_PING, if specified by the device configuration file for NAT\_SIGNALLING, is used instead.

NAT\_SIGNALLING is required for networks that use STUN or SIP\_PING for NAT traversal.

**NAT Media** The IP Phone 1140E with SIP Firmware supports STUN for media path the NAT traversal. The NAT Media feature can be disabled by setting the NAT\_Media field in **Device Settings** menu to NONE.

**Note:** STUN protocol cannot coexist with Application Layer Gateway (ALG), Media Portals, or RTP Proxy servers. If STUN is selected, ensure none of these devices are configured in the SIP Proxy server.

**NAT TTL** Enter the Time to Live (TTL) in seconds for the NATport if STUN is enabled. The Nortel IP Phone 1140E with SIP Firmware pings the open ports on an interval less than the TTL to prevent the NAT from tearing down the ports.

**STUN S1 IP** Enter an IP address for the STUN S1 IP device. The STUN server must reside in the public Internet for STUN protocol to be effective.

**STUN S2 IP** Enter an IP address for the STUN S2 IP device. The STUN server must reside in the public Internet for STUN protocol to be effective.



## Configure the device settings

This section describes how to provision the **Device Settings** parameters regardless of DHCP mode (Full DHCP, Partial DHCP, or No DHCP).

Parameters that are not needed in Full or Partial DHCP mode are grayed out on the IP Phone 1140E screen and cannot be modified.

Follow the next procedure to provision the **Device Settings** parameters on the IP Phone 1140E with SIP Firmware.

### Procedure 13

#### Provisioning the Device Settings parameters

Step	Action
1	Press the <b>Globe/Services</b> key on the IP Phone 1140E quickly twice. The Network menu appears:

**Table 20**  
**Network menu**

- |                    |
|--------------------|
| 1. Server Settings |
| 2. Device Settings |
| 3. Diagnostics     |
| 4. Lock            |

- |   |  |
|---|--|
| 2 | To navigate in the Network menu, use the <b>Navigation key cluster</b> : |
|---|--|

**Table 21**

#### Using the Navigation key cluster to navigate in the Network menu

Key	Action
Down	Moves highlight down
Up	Moves highlight up
Right	Selected current menu item
Left	Closes menu
<b>Select</b> key (center of cluster)	Selects current menu item

Menu items can also be accessed through the IP Phone 1140E keypad. Press the number (1-4) corresponding to a menu item to highlight that menu item. Press the **Select** key to select the highlighted menu item.

To close this menu, use the **Quit** key.

- |   |  |
|---|--|
| 3 | In the Network, choose <b>2. Device Settings</b> .                 |
| 4 | Enter the admin password. Press the OK Context-sensitive soft key. |

- 5 Use the **Navigation key cluster** to edit an item:

Table 22

Using the Navigation key cluster to navigate in the Device Settings menu

Key	Action
Down	Opens list or moves highlight down list.
Up	Moves highlight up list.
Right	Selects the next item or moves the cursor right in an edit item.
Left	Selects the previous item or deletes a character in the edit field.
<b>Select</b> key (center of cluster)	Selects the highlighted item in the combo box or ends edit mode.

In Edit mode, the first field of the item is highlighted. Press the **Apply&Reset Context-sensitive soft key** to save settings in the Device Settings menu after all the necessary changes are made. This action resets the IP Phone 1140E.

Press the **Return Context-sensitive soft key** to exit the Device Settings menu without saving any changes.

- 6 Navigate to the first item in the Device Settings menu to configure **EAP**.

Table 23

EAP configuration

Enable 802.1x (EAP): <input type="checkbox"/> Device ID: Password:
--

A check mark appears in the check box if the item is active.

- 7 If the **Enable 802.1x (EAP)** check box is checked, fill in the **Device ID** and the **Password**.

- 8 Configure DHCP in the Device Settings menu.

Use the right arrow in the **Navigation key cluster** to highlight the DHCP box. Press the **Select** key to access a list of DHCP mode choices:

- No
- Partial
- Full

Scroll through the list with the Up/Down arrows and select the appropriate parameter. Press the **Select** key to select No.

**Table 24**  
**DHCP configuration**

DHCP :	No	▼	
	No		
	Partial		
	Full		

- 9** Select SET IP in the Device Settings menu to configure the IP address.

**Table 25**  
**SET IP configuration**

SET IP : 0.0.0.0
------------------

- 10** If DHCP is disabled, configure Net Mask and Gateway. Enter a subnet mask in the Net Mask field and enter the IP address of the local gateway in the Gateway field.

**Table 26**  
**Net Mask and Gateway configuration**

Net Mask : 0.0.0.0
Gateway : 0.0.0.0

- 11** To configure the DNS, enter the IP address of the local DNS server.

**Table 27**  
**DNS configuration**

DNS IP : 0.0.0.0
------------------

- 12** Choose one of the following for Voice VLAN: No, Auto or 4095.

- 13** Enable or disable the VLAN Filter. Press the **Select** key to enable the VLAN Filter.

A check mark in the VLAN Filter box indicates that the VLAN Filter is enabled.

**Table 28**  
**VLAN Filter configuration**

VLAN Filter : <input type="checkbox"/>
--

- 14** Disable PC Port configuration. Press the **Select** key to turn off the PC port on the IP Phone 1140E.
- A check mark in the Disable PC Port box indicates the PC port is disabled.
- Disable PC Port can be used in an environment where administrators do not want users accessing the data network through the built-in PC port.

**Table 29**  
**Disable PC Port configuration**

Disable PC Port : <input type="checkbox"/>
--

- 15** Configure the Data VLAN.
- It is possible to Enable or disable separate VLAN for anything other than voice and signaling.

**Table 30**  
**Data VLAN Configuration in Device Settings menu**

Data VLAN :	No	▼	
	No		
	4095		

- 16** Configure PC-Port Untag-All, which configures PC-Port VLAN Tag Stripping. Check the check box by pressing the **Select** key in the Navigation key cluster to enable this item.
- If the check box is not checked, tag stripping is disabled and the packet is sent to the PC port unmodified. If the check box is checked, tag stripping is enabled and the 802.1q header is removed (assuming one exists) from the packet before it is forwarded through the PC port.
- If Data VLAN is enabled in step 15, PC-Port Untag All is enabled and the check box is checked by default. In this case, the outgoing tag is stripped. Override the default by pressing the **Select** key to remove the checkmark.

If Data VLAN is disabled, PC-Port Untag All is disabled and the check box is not checked by default. In this case, the ingress tag is not stripped. The default can be overridden by pressing the **Select** key, which places a checkmark in the box.

**Table 31**  
**PC-Port Untag-All Configuration in Device Settings menu**

PC-Port Untag all : <input type="checkbox"/>
--

**17** Configure the Ethernet port mode.

The Ethernet port mode is configured by the items in the Device Settings menu **Duplex** and **Ignore GARP**.

- Duplex: Duplex enables or disables Ethernet speed and mode negotiation. Select Auto unless the Ethernet port speed must be set to 10 MB/s or 100 MB/s. Select 10BT Full for 10 MB/s and 100BT Full for 100 MB/s.
- Ignore GARP: GARP requests handling. The default can be overridden by pressing the **Select** key, which places a check mark in the box.

**Table 32**  
**Ethernet port mode configuration**

Duplex :	Auto	▼	
	Auto		
	10BT Full		
	100BT Full		
Ignore GARP:	<input type="checkbox"/>		

**18** Enter Provisioning Parameters: Server URL, Protocol, Device ID, and Password.

The next four tables show menu items in the Device Settings menu that apply to configuring the Provisioning parameters.

- Server URL: Enter the URL of the provisioning server in the **Server URL** box.

**Table 33**  
**Server URL configuration**

Provisioning	
Server URL:	0.0.0.0

- Protocol: Select either TFTP, FTP, or HTTP used for provisioning in the **Protocol** box.

**Table 34**  
**Protocol configuration**

Protocol:	TFTP
	TFTP
	FTP
	HTTP

- Device ID: Enter the **Device ID** used by the provisioning server for authentication of the IP Phone 1140E.

**Note 1:** TFTP does not require a Device ID. If FTP or HTTP are used, enter the information for a Device ID

**Note 2:** Enter your User ID as the Device ID.

**Table 35**  
**Device ID configuration**

Device ID :	XXXXXXXXXX
-------------	------------

- Password: Enter the **Password** used by the provisioning server for authentication of the IP Phone 1140E. Note: TFTP does not require a Password. FTP and HTTP do require a password.

**Table 36**  
**Password configuration**

Password :	XXXXXXXXXX
------------	------------

**19** Configure the PVQMon IP address.

If this server is available on the network, enter the PVQMon IP address.

**Table 37**  
**PVQMon IP configuration**

PVQMon IP :	0. 0. 0. 0
-------------	------------

- 20** Configure the NAT Traversal Method. Use one of the following methods to traverse Network Address Translation (NAT) devices for the IP Phone 1140E with SIP Firmware.

The next five tables show menu items in the Device Settings menu that apply to configuring the NAT Traversal Method.

- **NAT Signal**

Select either None, SIP\_PING, or STUN to define the NAT traversal mode for SIP signaling.

**Table 38**  
**NAT Signal configuration**

NAT Traversal					
NAT Signal :	<table><tr><td>STUN</td></tr><tr><td>None</td></tr><tr><td>SIP Ping</td></tr><tr><td>STUN</td></tr></table>	STUN	None	SIP Ping	STUN
STUN					
None					
SIP Ping					
STUN					

- **NAT Media**

Select either None or STUN to define NAT traversal mode for signaling.

**Table 39**  
**NAT media configuration**

NAT Media :	STUN
	None
	STUN

- **NAT TTL:**

Enter the Time to Live (TTL) in seconds for the NAT traversal.

**Table 40**  
**NAT TTL configuration**

NAT TTL :	000
-----------	-----

- **STUN S1 IP:** Enter an IP address for the STUN S1 IP device.

**Table 41**  
**STUN S1 IP configuration**

STUN S1 IP :	<input type="text" value="00. 00. 00. 00"/>
--------------	---

- **STUN S2 IP:**

Enter an IP address for the STUN S2 IP device.

**Table 42**  
**STUN S2 IP configuration**

STUN S2 IP :	<input type="text" value="00. 00. 00. 00"/>
--------------	---

---

—End—

---



---

## Multiple Appearance Directory Number (Single Call Arrangement)

---

**Note:** Only users of the Communication Server 2000 (CS 2000) and Communication Server 2100 (CS 2100) have access to the Multiple Appearance Directory Number (MADN) Single Call Arrangement (SCA) feature at this time.

The Multiple Appearance Directory Number (MADN) allows a Directory Number (DN) to appear on more than one IP Phone 1140E with SIP Firmware. The MADN with Single Call Arrangement (SCA) feature allows multiple telephones to appear as a single line to a caller. Any one of the IP Phone 1140E telephones in a group with MADN can initiate or answer a call, but only one call can be active at any given time. Any other user in the group can join the active call by picking up the handset of the IP Phone 1140E with SIP Firmware.

With the MADN SCA feature configured on multiple telephones of different registered SIP users, the telephones share one single DN. An incoming call to this DN causes all the telephones in the group to ring.

Any user of an IP Phone 1140E with the MADN SCA feature can put a call on hold or can prevent others from joining in the active call.

If a user's group is active (as seen by line icon being off-hook) and the user picks up the handset, the user is automatically joined to an ongoing MADN call (unless the server restricts this feature for privacy or other factors).

### Vertical services

Vertical services are CS 2000 and CS 2100 features that can be activated or deactivated by dialing a defined code, for example, Privacy. Even though no more than one active session can be established for the MADN SCA group, members of the group can still enter certain vertical services.

Currently, the available vertical service is Privacy.

## **Privacy**

A user can activate the privacy service by putting the current session on hold and dialing the privacy code. The CS 2000 connects the IP Phone 1140E to the Media Application Server (MAS) to hear a confirmation for its request and terminates the session. The user takes the original session off hold.

### **Privacy access codes**

The privacy access codes are: PRV, PRLA, PRLC.

For example: PRV = 191 PRLA = 192 PRLC = 193

If the initial state of the MADN group is nonprivate, the PRV access code is used to toggle between privacy on and privacy off. If the initial state of the MADN group is private, the PRLA access code allows bridging and PRLC closes it.

## **Feature dependencies and restrictions**

The minimum release to support MADN SCA feature is 1.1. Multi-User login is not supported.

---

# Emergency 911 - Operator control of disconnect

---

## Overview

For Emergency 911 services to be effective, it is vital that a system maintain a connection with the 911 operator until the user provides all necessary information. In traditional 911 telephony, if a 911 call is disconnected before the necessary information is provided, mechanisms are in place to allow the 911 operator to ring back the calling party. In VoIP calls, 911 support is an evolving standard.

If the user of an IP Phone 1140E attempts to disconnect a 911 call after the 911 operator has answered, the IP Phone 1140E switches to hands-free mode. Once the IP Phone 1140E is in hands-free mode, the 911 call can only be disconnected by the operator.

Emergency 911 calls originate on the IP Phone 1140E and are completed by the Call Server. The Call Server communicates with the 911 network or 911 systems for routing, call control, and location information. Although the IP Phone 1140E allows users to enter location information, this location information is not used by all Call Servers. Some Call Servers derive the location information based on the number and location databases. Characteristics of Emergency 911 calls and limitations of Emergency 911 calls using the IP Phone 1140E are given below.

## Location information

Effective Emergency 911 services also rely on accurate location information. The IP Phone 1140E supports the inclusion of the x-nt-location header in SIP messages that provide location information to a Nortel call server. The location information is selected by the user during registration, and must be correctly provisioned at the call server level (see appropriate NTP specific to your call server).

## Dialing plan configuration

To allow operator control of disconnect during a 911 call, the IP Phone 1140E must identify a 911 call as soon as a 911 call is initiated. The IP Phone 1140E uses an emergency flag in the dialing plan to identify a 911 call. When the dialing plan detects that an emergency number is dialed, it automatically switches to operator controlled disconnect mode when the call is answered. The dialing plan can have multiple emergency numbers.

### Examples of an emergency flag in the dialing plan

```
(911)|(911)# &&sip:$@$n;user=phone&&emergency  
(4357)|(4357)# &sip:$@$n;user=phone&&emergency
```

## Characteristics of E911 calls

During an E911 call, the user:

- cannot make outgoing calls
- is not notified of incoming calls and cannot accept incoming calls. Incoming calls receive a busy signal
- cannot transfer, join, or conference the E911 call, place the E911 call on hold, or park the E911 call
- cannot receive an incoming call
- cannot auto-retrieve a parked call and auto-retrieval of parked calls is not displayed
- cannot disconnect the E911 call. Only an E911 center or operator can disconnect the emergency call
- cannot change Audio Quality
- can reply to IM pop-ups, which are operational during an E911 call

During an E911 call the keys function as follows:

- the **Services**, **Inbox**, **Outbox**, and **Address-Book** keys are all disabled
- a right click of the mouse does not show the services menu
- the conspicuous keys are disabled
- the mute key and hold key are disabled
- the increase and decrease volume keys remain functional.
- the feature keys are visible and all except the speed-dial keys are functional.

---

## IP Phone 1140E restrictions

---

### Service package restrictions

Individual features and feature restrictions are sent to the IP Phone 1140E as a part of the service package every time a particular user logs on to the IP Phone 1140E. If the call server does not support service packages, or if the call server restricts some of the features in the service package, functionality of some features is restricted.

If functionality is restricted, the associated buttons and Context-sensitive soft keys are not accessible or do not respond.

### Distinctive Ringing feature

The IP Phone 1140E does not support the CS 2000 and CS 2100 Distinctive Ringing feature.



---

## NAT firewall traversal

---

The objective of putting devices behind a Network Address Translator (NAT) is to protect the devices from external interruption and to extend the public IP address space. However, the shield to stop unsolicited incoming traffic also has the drawback of breaking a number of IP applications, including SIP.

If a device is behind a NAT, transport addresses obtained are not publicly routable, and therefore, not useful in a number of multimedia applications. The limited lifetime of the NAT port mapping can also cause the SIP signaling to fail. If a port mapping is idle, it can be released by the NAT and reassigned to other applications.

The STUN protocol lets an IP Phone 1140E discover the presence and type of NATs between the IP Phone 1140E and the public Internet. In addition, an IP Phone 1140E can discover the mapping between the private IP address and port number and the public IP address and port number. Typically, a service provider operates a STUN server in the public Internet, with STUN-enabled IP Phones embedded in end-devices, which are possibly behind a NAT.

A STUN server can be located using DNS SRV records using the domain of the service provider as the lookup. STUN typically uses the well-known port number 3478. STUN is a binary encoded protocol with a 20-octet header field and possibly additional attributes. The STUN protocol learns the public IP addresses, and therefore, some security is necessary.

To initiate a STUN lookup, the IP Phone 1140E sends one or more Binding Request packets using UDP to the STUN server. These packets must be sent from the same IP address that the IP Phone 1140E uses for the other protocol, because this is the address translation information that the IP Phone 1140E tries to discover.

The server returns Binding Response packets, which tell the IP Phone 1140E the public IP address and port number from which it received the Binding Request. The IP Phone 1140E knows the private IP address and port number it used to send the Binding Request, and therefore, it learns the mapping between the private and public address space being performed by the NAT. If the Binding Response packets indicate the same address and port number as the request, the IP Phone 1140E knows no NATs are present.

The IP Phone 1140E supports two methods for NAT traversal of the signaling path:

- SIP\_PING
- STUN

The NAT traversal method can be selected manually through the Device Settings menu or configured through the device configuration file. The default NAT traversal method is NONE.



---

## Three-port switch and VLAN functionality

---


### System overview

The Full VLAN support feature can create telephone Voice-VLAN and PC Data-VLAN on the three-port switch of the IP Phone 1140E manually and automatically (see [Figure 12 "Voice-VLAN and Data VLAN" \(page 106\)](#)).

If both Data and Voice VLAN's are enabled on a three-port switch, only the frames with Data and Voice VLAN tagged go to networks. The IP Phone 1140E receives only the frames with Voice VLAN tagged and sends the frames with Voice VLAN tagged, while PC or Local Networks receive all kinds of frames.

When only voice VLAN is enabled on three-port switch, all kinds of frames go to the Network, the IP Phone 1140E receives only the frames with Voice VLAN tagged and send all frames with Voice VLAN tagged. PC or Local Networks receive all kinds of frames.

**Figure 12**  
**Voice-VLAN and Data VLAN**

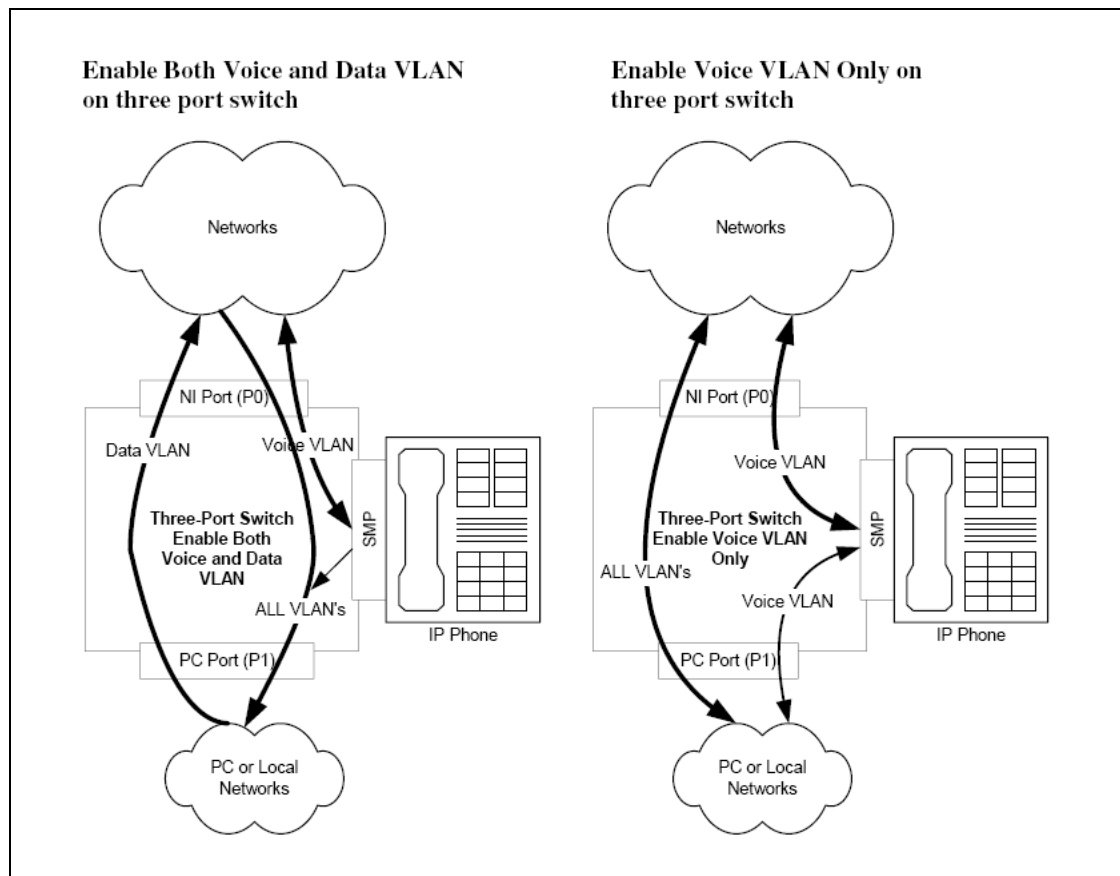

**Table 43**  
**Port functions on the three-port switch when VLAN is enabled**

Ports	Voice VLAN enabled	Data VLAN enabled	Both Voice and Data VLAN enabled
Network Port (Port 0)	N/A	N/A	N/A
IP Phone 1140E Port (SMP)	Receiving the frames with Voice VLAN tagged only. Sending the frames with Voice VLAN tagged.	N/A	Receiving the frames with Voice VLAN tagged only. Sending the frames with Voice VLAN tagged.
PC Port (Port 1)	N/A	Tagging the incoming frame untagged and forwarding it to network port.	Tagging the incoming frame untagged and forwarding it to network port.

		Replacing the incoming frame tagged with VLAN other than Data-VLAN and forwarding it to network port.  Sending all kinds of frames.	Replacing the incoming frame tagged with VLAN other than Data-VLAN and forwarding it to network port.  Sending all kinds of frames.
--	--	---	---

VLAN configuration can be done either manually or through DHCP. Refer to ["Device Settings on the IP Phone 1140E with SIP Firmware" \(page 81\)](#) for more detail on configuring VLANs.



## SIP messages supported by the IP Phone 1140E

### SIP methods

Method	Supported?	Comments
INVITE	Yes	Mid-call re-invites for media changes also supported.
ACK	Yes	
BYE	Yes	
CANCEL	Yes	
OPTIONS	Response only	
INFO	Yes	Optionally used for in-session DTMF signaling, and Nortel call server specific NAT detection
PING	Yes	Proxy detection, monitoring and Nortel call server specific firewall traversal
REGISTER	Yes	For user registration
REFER	Yes	For transfer
NOTIFY	Yes	
SUBSCRIBE	Yes	
PUBLISH	Yes	For VQMon Publish

PRACK	Yes	No support for PRACK-specific early-media negotiation scenarios
MESSAGE	Yes	
UPDATE	No	

## SIP responses

The following SIP responses are also supported:

- 1xx Response--Information Responses
- 2xx Responses--Successful Responses
- 3xx Response--Request Failure Responses
- 4xx Response--Server Failure Responses
- 6xx Response--Global Responses

### 1xx Response--Information Responses

1xx Response	Send	Receive	Comments
100 Trying	Yes	Yes	The IP Phone 1140E can generate this response for an incoming INVITE if it has taken too long to generate a 180 response. Upon receiving this response, the IP Phone 1140E waits for a 180 Ringing, 183 Session Progress, or 200 OK responses.
180 Ringing	Yes	Yes	The IP Phone 1140E begins local ringing through the active transducer.
181 Call is being forwarded	No	Yes	See 183.
182 Queued	No	Yes	See 183.
183 Session progress	No	Yes	The IP Phone 1140E accepts a 183 response with SDP to allow for early-media negotiation.

**2xx Response--Successful responses**

2xx Response	Send	Receive	Comments
200 OK	Yes	Yes	
202 Accepted	Yes	Yes	

**3xx Response--Redirection responses**

3xx Response	Send	Receive	Comments
300 Multiple Choices	No	Yes	When receiving this response, the IP Phone 1140E redirects the original request to next contact specified.
301 Moved permanently	No	Yes	When receiving this response, the IP Phone 1140E redirects the original request to the new contact specified. However, the IP Phone 1140E takes no additional special consideration of the "permanent" status of this change.
302 Moved temporarily	Yes	Yes	This response is sent to an incoming invite if the IP Phone 1140E has local call-forwarding enabled. When receiving this response, the IP Phone 1140E redirects the original request to the new contact specified.
305 Use Proxy	Yes	Yes	The IP Phone 1140E generates these responses when receiving requests that did not come through the configured SIP proxy. When receiving this request, the IP Phone 1140E contacts the new address in the Contact header field.
380 Alternate service	No	Yes	When receiving this request the IP Phone 1140E contacts the new address in the Contact header field.

**4xx Response--Request failure responses**

4xx Response	Send	Receive	Comments
400 Bad request	Yes	Yes	The IP Phone 1140E generates a 400 Bad Request response for various failure conditions generally when a request is invalid, and a more specific error response does not apply.
401 Unauthorized	No	Yes	Receiving a 401 response results in the IP Phone 1140E re-issuing the request using HTTP digest authentication.
402 Payment required	No	Yes	See default handling.
403 Forbidden	No	Yes	See default handling.
404 Not found	Yes	Yes	The IP Phone 1140E generates this response for requests to unknown users. Receiving this response falls through to the default handling.
405 Method not allowed	Yes	Yes	The IP Phone 1140E sends this response to a known method if it is received at a time when the IP Phone 1140E is not prepared to handle or the request is missing necessary information. Receiving this response falls through to the default handling.
406 Not acceptable	Yes	Yes	The IP Phone 1140E can send this response when receiving a REFER request which has an unsupported URI. Receiving this response falls through to the default handling.
407 Proxy authentication required	No	Yes	See 401.
408 Request timeout	No	Yes	See default handling.
410 Gone	No	Yes	See default handling.



413 Request entity too large	No	Yes	See default handling. The IP Phone 1140E does not automatically retry if a retry-after header is present.
414 Request---URL too long	No	Yes	See default handling.
415 Unsupported Media	Yes	Yes	The IP Phone 1140E can send this response when an incorrect content-type is detected for a request. Receiving this response falls through to the default handling.
420 Bad Extension	Yes	Yes	The IP Phone 1140E can respond with a 420 when checking required extensions of incoming requests. When receiving a 420, see default handling. The IP Phone 1140E does not retry the request.
480 Temporarily unavailable	No	Yes	See default handling.
481 Call leg/ transaction does not exist	Yes	Yes	Incoming requests are matched against existing dialogs. If a request appears to be in-dialog, but does not have an existing dialog, the IP Phone 1140E responds with a 481. For incoming 481 responses, the default handling is used.
482 Loop detected	Yes	Yes	Default handling is used when this response is received.
483 Too Many Hops	No	Yes	See default handling.
484 Address Incomplete	No	Yes	See default handling.
485 Ambiguous	No	Yes	See default handling. The IP Phone 1140E does not attempt to retry the request.

486 Busy Here	Yes	Yes	The IP Phone 1140E can respond with this if the user is on the IP Phone 1140E, and the IP Phone 1140E has reached its maximum number of allowed calls and cannot present the incoming call to the user. When this message is received by the IP Phone 1140E an error is displayed and a busy tone is played.
487 Request Canceled	Yes	Yes	See default handling.
488 Not Acceptable	Yes	Yes	The response is used by the IP Phone 1140E when a failed media negotiation occurs.
491 Request Pending	Yes	Yes	The IP Phone 1140E sends and receive this message in GLARE conditions.

### 5xx Response--Server failure responses

5xx Response	Send	Receive	Comments
500 Internal Server Error	Yes	Yes	The IP Phone 1140E can send this response when a request is received but the IP Phone 1140E software is not in a correct state to handle it. When receiving this message the IP Phone 1140E displays an error for the user.
501 Not Implemented	No	Yes	See default handling.
502 Bad Gateway	No	Yes	See default handling.
503 Service Unavailable	Yes	Yes	
504 Gateway timeout	No	Yes	See default handling.
505 Version Not Supported	Yes	Yes	

### 6xx Response--Global responses

6xx Response	Send	Receive	Comments
600 Busy Everywhere	Yes	Yes	The IP Phone 1140E can send this response when the IGNORE setting is set to NETWORK, and the user chooses to ignore an incoming call. When received, this response falls through the default handling.
603 Decline	Yes	Yes	The IP Phone 1140E can send this response when the user declines an incoming call. An optional reason can be supplied.
604 Does Not Exist Anywhere	No	Yes	See default handling.
606 Not Acceptable	No	Yes	See default handling.

### Default error handling

All 4xx/5xx/6xx responses (with the exception of 401/407) received by the IP Phone 1140E when attempting to initiate a call result in the display of an error on the screen, and typically results in fast or regular busy tone.

If a media negotiation fails during dialog setup, the IP Phone 1140E terminates the dialog.

If an in-dialog failure occurs during media (re)negotiation, the IP Phone 1140E falls back to previously negotiated media settings. When a failure occurs that makes this impossible, the IP Phone 1140E attempts to clear the call by terminating the dialog.

### SIP header fields

The following table contains the supported SIP headers.

Header field	Supported?
Accept	Yes
Accept-Encoding	Yes
Accept-Language	Yes

Alert-Info	Yes
Allow	Yes
Allow-Events	Yes
Authentication-Info	Yes
Authorization	Yes
Call-Id	Yes
Call-Info	Yes
Contact	Yes
Content-Disposition	Yes
Content-Encoding	Yes
Content-Length	Yes
Content-Type	Yes
Cseq	Yes
Date	Yes
Expires	Yes
Error-Info	Yes
Max-Forwards	Yes
Mime-Version	Yes
Organization	Yes
P-Access-Network-Info	Yes

P-Asserted-Identity	Yes
P-Associated-URI	Yes
P-Called-Party-ID	Yes
P-Charging-Function-Addresses	Yes
P-Charging-Vector	Yes
P-Media-Authorization	Yes
P-Preferred-Identity	Yes
P-Visited-Network-ID	Yes
Path	Yes
Priority	Yes
Privacy	Yes
Proxy-Authenticate	Yes
Proxy-Require	Yes
RAck	Yes
Reason	Yes
Record-Route	Yes
Refer-To	Yes
Referred-By	Yes
Remote-Party-ID	Yes
Replaces	Yes

Reply-To	Yes
Require	Yes
Resource-Priority	Yes
Retry-After	Yes
Route	Yes
RSeq	Yes
Server	Yes
Service-Route	Yes
Subject	Yes
Supported	Yes
Timestamp	Yes
To	Yes
Unsupported	Yes
User-Agent	Yes
Via	Yes
Warning	Yes
WWW-Authenticate	Yes

## Session description protocol usage

SDP Headers	Supported?
v--Protocol version	Yes

o--Owner or creator and session identifier	Yes
s--Session name	Yes
t--Time description	Yes
c--Connection information	Yes
m--Media name and transport address	Yes
a--Media attribute lines	Yes

## SDP and Call Hold

The IP Phone 1140E can support sending and receiving of hold using the method specified by RFC2543 and RFC3261/3264.

## Transport layer protocols

Protocol	Supported?
Unicast UDP	Yes
Multicast UDP	No
TCP	No

## SIP security authentication

Authentication	Supported?	Comments
Digest Authentication	Yes	
Proxy-to-User Authentication	Yes	
User-to-User Authentication	No	The IP Phone 1140E responds to a 401, but never challenges incoming requests with a 401 response.

S/MIME	No	
AKA	No	

## SIP DTMF Digit transport

Transport type	Supported?
RFC 2833	Yes
In-band tones	Yes
Out-of-band tones	Yes (vnd.nortelnetworks.digits)

## Supported subscriptions

Subscription type	Supported	Nortel Call Server specific
address-book	Yes	Yes
call-park	Yes	Yes
dialog	Yes	Yes
presence	Yes	Yes
message-summary	Yes	No
ua-profile	Partial	Yes
service-package	Yes	Yes
network-redirection-reminder	Yes	Yes

## Supported instant messaging

Message type	Supported?
plain text	Yes



Nortel unencrypted	Yes
Nortel encrypted	Yes



# Maintenance and troubleshooting

## Convert SIP Firmware to UNISTim Firmware

The IP Phone 1140E can be ordered with UNISTim Firmware installed or with SIP Firmware installed. If you have an IP Phone 1140E with UNISTim Firmware, and you convert the firmware from UNISTim to SIP, the UNISTim Firmware is overwritten. To convert an IP Phone 1140E from SIP Firmware to UNISTim Firmware, a firmware reload is required.

### Procedure 14

#### Reloading UNISTim Firmware

Step	Action
1	<p>Determine the appropriate UNISTim version to match the hardware release number of your IP Phone 1140E.</p> <p>There are different versions of UNISTim Firmware available for download. Which version you choose depends on the hardware release number of your particular IP Phone 1140E.</p> <p>If the hardware release number of your IP Phone 1140E is among the following hardware release numbers, download UNISTim Firmware version release 0625C39 or higher (the hardware release number is the Product Engineering Code [PEC] followed by the release number):</p> <ul style="list-style-type: none"> <li>• NTYS05ACE6 20</li> <li>• NTYS05BCE6 20</li> <li>• NTYS05BCGSE6 04</li> </ul> <p>If the hardware release number of your IP Phone 1140E is not among the previous list, download UNISTim version release 0625C23 or higher.</p> <p><b>Note:</b> UNISTim Firmware version names contain numbers and letters. Use the last three characters in a version to determine the minimum required version for the conversion. For example, C39 is greater than C23.</p>

- 2 Download the appropriate UNISTim Firmware file to your TFTP server.
- 3 Create an 1140eSIP.cfg file containing the following information:  
[FW]  
DOWNLOAD\_MODE FORCED  
VERSION xxx  
FILENAME yyy.bin  
  
where xxx is the UNISTim version number appropriate for the hardware release of your IP Phone 1140E, for example, 0625C23, and yyy.bin is the filename containing the version number, for example, 0625C23.bin.
- 4 Power the IP Phone 1140E off and on. The IP Phone 1140E reboots and contacts the TFTP server upon bootup and downloads the new UNISTim Firmware.

---

—End—

---

## IP Phone 1140E diagnostics

Network-related issues can be debugged using Network Diagnostic Utility (NDU) built into the IP Phone 1140E.

Another way to diagnose a problem on an IP Phone 1140E is to capture a message trace using any appropriate software.

The IP Phone 1140E has Problem Determination Tools (PDT). These can be accessed through a Telnet session using the IP address of the IP Phone 1140E (for login and password, contact Nortel).

### **Problem: Server unreachable after the IP Phone 1140E is powered up.**

If the display indicates that the server is unreachable and it continuously resets, some parameters must be configured. Things to consider when setting parameters:

- Enter requested information in the menu fields by pressing the number keys on the dialpad. Press the asterisk (\*) key to enter a period (.) when entering an IP address.
- To record the entry and advance the initialization to the next parameter, press **OK**.
- To abandon the manual configuration process and restart the power-up, press **Cancel**.

- To manually enter parameters, use the **BKSpace** or **Clear** Context-sensitive soft keys to edit the default entry. BKSpace deletes each character as the key is pressed. Clear deletes the entire entry.
- Each parameter must have a corresponding entry. An audible beep indicates a field entry must be made before advancement to the next parameter.

### Problem: Firmware Download Failure

If you are having trouble downloading firmware, review the following bullets.

- Is the TFTP IP address correct within the 1140E device settings menu?
- Is the IP Phone 1140E connecting to the TFTP server log?

Check any firewall configuration settings to allow TFTP protocol access.

Is the syntax within the 1140e.cfg or 1140eSIP.cfg correct? See Provisioning file supported sections in the chapter "[Configure the provisioning server](#)" (page 25). Supported sections describe the syntax of the configuration file.

- Does DOWNLOAD\_MODE = AUTO and is VERSION less than the current running firmware version? If a file does not download using the AUTO selection, it is possible the version number is not high enough. A version number exists permanently on the IP Phone 1140E until a higher version number is downloaded through the device configuration file or you select **Srvcs, System, Erase User Data** on the IP Phone 1140E.
- Check FILENAME. Does this exist on the TFTP server?
- Check to make sure your firewall settings allow for the provisioning protocol (TFTP, FTP, OR HTTP) to go through.

There is a chance of firmware download failure, leaving the IP Phone 1140E with no valid application code and only the boot loaders. If this happens, the boot loaders are executed and handle the application download.

### Problem: Firmware Conversion Failures

There are four different boot loaders in the FLASH and application load. Various boot loaders are used to recover the IP Phone 1140E in case of any failure occurs.

- If a conversion fails before anything is written to FLASH, the IP Phone 1140E reboots with the UNISlim Firmware load.
- If the firmware download fails while the application is being written to FLASH, there are two possible recovery methods:
  - If an application file was not created, after power up the IP Phone 1140E jumps to the BootC loader and downloads a new application load using the same mechanism as the application.

- If the application is executed and the file created is corrupted, the IP Phone 1140E crashes. In this case, force the IP Phone 1140E to use BootC by holding up key and “2” during power up.

**Problem: Users of the IP Phone 1140E complain that their banner is not updated with their custom banner**

When the banner is set to FORCED in the device configuration file, the user’s banner is overwritten by the value in the device configuration file.

**Problem: Provisioning Error is displayed on the IP Phone 1140E display.**

The Provisioning Error is displayed on the screen when the IP Phone 1140E is unable to contact the TFTP, FTP, or HTTP server.

# Index

## Symbols/Numerics

1100 series phones separably orderable parts  
 802.1x (EAP) authorization 83  
 802.1x (EAP) device ID 83  
 802.1x (EAP) password 83  
 802.1x (EAP) Port-based network access control 82

## A

Automatic provisioning at a preconfigured time 25  
 Automatic provisioning at power-up 25

## C

Checking the UNISTim Firmware version on an IP Phone 1140E in use 70  
 Checking the UNISTim version on a new IP Phone 1140E 69  
 Configuration file 28  
 Configure the device settings 89  
 Configure the DHCP server 57  
 Configuring the DHCP server to support full DHCP mode 59  
 Configuring the provisioning server 25  
 Configuring the TFTP server 72  
 Connections on the IP Phone 1140E 65  
 Convert SIP FW to UNISTim FW 123  
 Converting UNISTim Firmware to SIP Firmware 75  
 Converting UNISTim Firmware to SIP Firmware using TFTP 76

Create the device configuration file on the provisioning server 31  
 Creating the SIP provisioning file on the provisioning server 26  
 Custom banner problem 126

## D

Data (DHCP VLAN Auto Discovery) 62  
 Data VLAN 86  
 Data VLAN configuration  
 Default error handling 115  
 Device configuration commands, details 34  
 Device configuration commands, list  
 Device configuration file example 31  
 Device ID 87  
 Device ID configuration  
 Device Settings 81  
 Device Settings menu parameters  
 Device settings on the IP Phone 1140E with SIP Firmware 81  
 Device Settings parameters 60  
 DHCP 83  
 DHCP configuration  
 DHCP VLAN Auto discovery 61  
 Dialing function description 52  
 Dialing plan 52  
 Dialing plan declarations section sample 53  
 Dialing plan digit map section sample 54  
 Dialing plan file on the provisioning server 50  
 Dialing plan sample 52  
 dialing plan variable definitions sample 53  
 Disable PC Port 85  
 Disable PC Port configuration

Distinctive ringing feature 101  
DNS configuration  
DNS IP 84  
Downloadable WAV files 56  
Downloading SIP Firmware from the Nortel  
  Web site 75  
Downloading the SIP Firmware to the  
  provisioning server 26  
Downloading UNISTim Firmware through  
  TFTP on bootup 74  
DRegex 54  
DRegex rules 55  
Duplex 87

## E

EAP configuration  
Emergency 911 - Operator control of  
  disconnect 99  
Emergency 911 characteristics of E911  
  calls 100  
Emergency 911 dialing plan  
  configuration 100  
Emergency 911 location information 99  
Emergency 911 overview 99  
Ethernet port mode configuration

## F

Feature configuration commands 36  
Feature dependencies and restrictions 98  
Firmware conversion failure 125  
Firmware download failure 125  
Full DHCP mode 58  
Full DHCP mode characteristics  
Full DHCP mode DHCP options

## G

Gateway 84

## I

Identify the current version of UNISTim  
  Firmware 69  
Ignore GARP 87  
Installation overview 17  
Installation overview flowchart 18  
IP Phone 1140E diagnostics 124

IP Phone 1140E Getting Started Card 16  
IP Phone 1140E restrictions 101  
IP Phone 1140E with SIP Firmware  
  illustration 16

## L

Length (DHCP VLAN Auto Discovery) 62

## M

Maintenance and troubleshooting 123  
Mandatory keywords in the provisioning  
  file 29  
Multiple Appearance Directory Number 97

## N

NAT configuration commands 47  
NAT firewall traversal 103  
NAT Media 88  
NAT media configuration  
NAT Signal 88  
NAT Signal configuration  
NAT Traversal 88  
NAT TTL 88  
NAT TTL configuration  
Net Mask 84  
Net Mask and Gateway configuration  
Network requirements 22  
No DHCP mode 83

## O

Optional keywords in the provisioning file 30

## P

Partial DHCP mode 57  
Partial DHCP mode characteristics  
Partial DHCP mode DHCP options  
Password 87  
Password configuration  
PC-Port Untag all 86  
PC-Port Untag-All configuration  
Physically installing the IP Phone 1140E 63  
Port functions on the three-port switch when  
  VLAN is enabled  
Preinstallation checklist 21



Proactive Voice Quality Monitoring  
(PVQMon or VQMon) 79  
Protocol 87  
Protocol configuration  
Provisioning 87  
Provisioning DHCP 83  
Provisioning error displayed 126  
Provisioning file example 27  
Provisioning file supported sections  
Provisioning server 25  
Provisioning the Device Settings  
parameters 89  
Provisioning updates 25  
PVQMon IP 88  
PVQMon IP configuration  
PVQMon or VQMon Server set-up 80

## Q

QoS and ToS commands 44

## S

SDP and Call Hold 119  
Server and network configuration  
commands 34  
Server unreachable after power up 124  
Server URL 87  
Server URL configuration  
Service package restrictions 101  
Session description protocol usage 118  
SET IP 84  
SET IP configuration  
SIP DTMF Digit transport 120  
SIP Firmware Release 1.1 for IP Phone  
1140E User Guide 16  
SIP header fields 115  
SIP IP Phone 1140E class identifier 59  
SIP messages supported 109  
SIP methods 109  
SIP overview 15  
SIP responses 110  
SIP responses - 1xx Response 110

SIP responses - 2xx Response 111  
SIP responses - 3xx Response 111  
SIP responses - 4xx Response 112  
SIP responses - 5xx Response 114  
SIP responses - 6xx Response 115  
SIP security authentication 119  
STUN S1 IP 88  
STUN S1 IP configuration  
STUN S2 IP 88  
STUN S2 IP configuration  
Support instant messaging 120  
Supported SIP proxy servers 20  
Supported subscriptions 120  
System commands 50

## T

Three-port switch and VLAN  
functionality 105  
Tone configuration commands 45  
Transport layer protocols 119  
Type (DHCP VLAN Auto Discovery) 62

## U

Upgrade and convert the IP Phone 1140E  
firmware 67  
Upgrade the SIP Firmware 67  
Upgrade the UNISTim Firmware version 72  
Upgrade to the minimum UNISTim  
Firmware 69

## V

Vertical services (MADN) 97  
VLAN Filter 85  
VLAN Filter configuration  
Voice VLAN 84  
Voice-VLAN and Data VLAN 106  
VQMon - how it works 80  
VQMon configuration commands 48  
VQMon set-up 79





# SIP Firmware Release 1.1 for IP Phone 1140E Administration

Copyright © 2008, Nortel Networks  
All Rights Reserved.

Publication: NN43113-300  
Document status: Standard  
Document version: 02.05  
Document date: 27 May 2008

To provide feedback or to report a problem in this document, go to [www.nortel.com/documentfeedback](http://www.nortel.com/documentfeedback)

Sourced in Canada.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendation in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks.

Nortel, the Nortel logo and the Globemark are trademarks of Nortel Networks.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nortel Networks is under license.

All other trademarks are the property of their respective owners.

